

# M157598BG.3

ITEM NUMBER: 157598

SERIAL NUMBER: \_\_\_\_\_

# **Owner's Manual** Instructions for Set-up, Operation, Maintenance & Storage <u>2-GUN HOT WATER PRESSURE WASHER – 4000 PSI / 7 GPM</u> Portable Outdoor-Use Only

This pressure washer produces both cold and hot water high pressure spray. Cleaning chemicals may be incorporated into the spray if desired. The pressure pump for this equipment is powered by a gasoline internal combustion engine and the water is heated by a kerosene/fuel-oil fired, open flame burner.

# WARNING – READ THIS MANUAL

**READ and UNDERSTAND this Owner's Manual and the Engine Owner's Manual completely before attempting to set up and use the pressure washer!** Failure to properly set up, operate, and maintain this pressure washer could result in *serious injury or death* to operator or bystanders.

maintain this pressure washer could result in <i>serious injury or death</i> to operator or bystanders.			
Â	WARNING – SPECIAL HAZARDS		
CO Poisoning	Exhaust from both the engine and burner contains carbon monoxide, a poisonous gas that can cause carbon monoxide poisoning and possible death if inhaled.		
Skin/Eye Injury	High-pressure spray can cause serious skin or eye injury, including injection injury if fluid pierces the skin. Injection injury can result in blood poisoning and/or severe tissue damage.		
Burns	Hot spray can scald and burn skin. Hot surfaces of wand, engine and burner, as well as hot exhaust from both the engine and burner can cause burns.		
Slips/Falls	Spray discharge can cause puddles and slippery surfaces. Spray-gun kickback can cause operator loss of balance and falls.		
Flying Debris	High-pressure spray can cause surface damage and flying debris.		
Fire/ Explosion	Engine and burner sparking can ignite fuel or other flammable liquids or vapors in the vicinity. Hot exhaust from engine and burner can ignite combustible materials.		
Chemical Exposure	Cleaning chemical vapors or contact with skin may be hazardous.		
Electric shock	Spray contact with electrical sources can cause electric shock.		
A summary of important safety information is provided at the end of the manual.			

# Any Questions, Comments, Problems, or Parts Orders

Call NorthStar Product Support 1-800-270-0810

### Hazard Signal Word Definitions



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER (red) indicates a hazardous situation, which if not avoided, will result in death or serious injury.

WARNING (orange) indicates a hazardous situation, which if not avoided, could result in death or serious injury.

CAUTION (yellow), used with the safety alert symbol, indicates a hazardous situation, which if not avoided, could result in minor or moderate injury.

CAUTION (yellow), without the safety alert symbol, is used to address practices not related to personal injury.

NOTICE is used to address practices not related to personal injury.

Equipment Protection Quick Facts				
Inspect Upon Delivery	<b>STOP!</b> Closely inspect to make sure no components are missing or damaged. See the "Assembly and Initial Set-Up" section for instructions on whom to contact to report missing or damaged parts.			
Fill with Engine Oil		<b>STOP!</b> Engine is shipped <u>without</u> oil. DO NOT start pressure washer without adding oil to engine. Please refer to Engine Manual shipped with unit for acceptable grade motor oils.		
Check Pump Oil	Pump is shipped with oil. Check pump oil level before starting.			
Battery Required	A battery is not included. The engine will not run and burner will not fire unless a battery is installed. Purchase a standard, top post mount 12VDC, 18 Ah automotive battery (Group 75).			
Water Flow Requirements	Water supply is tank fed. (Water tank is not included.) Make sure the supply water flow rate is always 20% higher than the pressure washer's flow rate (see "Specifications" and "Assembly/Initial Set-Up" sections for detail), and that your water is clean and particle free.			
Storage	Do not allow wa	ter to freeze in the pump, hose, coil, or spray gun(s).		
Chemical	Use only NorthStar brand or equivalent washer chemicals designed for high-pressure use.			
Spraying	Use soap adjustment knob to regulate cleaning power.			
Maintenance Schedule	Engine: Pump:	<ul> <li>See Engine Owner's manual.</li> <li>Change oil after first 40 hours, then every 3 months or 500 hours.</li> <li>Check mounting bolts regularly for proper torque.</li> </ul>		
	Burner fuel filter /water separator:	<ul><li>Drain water as needed.</li><li>Change filter after every 500 hours of use</li></ul>		
	Coil:	• Descale coil annually or more frequently as conditions/performance require.		
	Electrodes:	Inspect electrodes annually and clean/adjust as needed		
	Belts:	• Check belt tension after first 24 hours of use, then routinely with each oil change. Tighten or change belts as needed.		

# Table of Contents

About Your Pressure Washer	4
Specifications	5
Component Identification	6
Safety Labeling	8
Special Equipment Safety Features	9
Assembly and Initial Set-Up Step 1. Unpacking & Delivery Inspection Step 2. Attaching a Water Feed Tank (customer supplied) Step 3. Initial Pump & Engine Preparation Step 4. Battery Installation	
Moving and Handling	15
Before Each Use Step 1. Check Equipment Step 2. Add Fuel(s) Step 3. Select a Suitable Worksite	
Operation	
Storage	
Burner Adjustment	
Maintenance and Repair	
Troubleshooting	48
Parts Explosion	49
Pump Explosion	51
Wiring Diagram	53
Summary of Important Safety Information	54
Limited Warranty	59
California Proposition 65 Information	60

### About Your Pressure Washer

Thank you for purchasing a NorthStar hot water pressure washer! Your machine is designed for long life, dependability, and the top performance you demand. This pressure washer is designed to:

- 1) Produce a high-pressure spray of heated or unheated water (up to 7 gallons per minute at 4000 psi). The pressure washer may be operated in either dual- or single-gun mode.
- 2) Incorporate cleaning chemicals into a low-pressure water spray.

The pump requires a clean, tank-fed water supply at a flow rate of at least 8.4 gallons per minute. (The water tank must be supplied by the customer -a 200 gallon capacity tank or greater is recommended.) Any cleaning chemicals that are used must be specifically approved for use in pressure washers.

The pump is powered by a gasoline-fueled engine. The spray water is heated (when desired) by a kerosene/fueloil fired, spark-ignited, open flame burner. Normal operation of this equipment will require you to supply:

- Gasoline fuel and lubrication oil for the engine
- Pump oil
- Fuel for the burner (kerosene, diesel, or fuel oil)
- A 12-volt top post mount automotive battery

See the "Specifications" section of this manual for more detail.

Gasoline powered pressure washers are for OUTDOOR USE ONLY. Be sure to read about site selection for running this pressure washer in the "Installation & Initial Set-up" section of this manual.

The user should plan to acquire and wear safety apparel during operation of this pressure washer. Safety apparel includes waterproof insulated gloves, safety glasses with side and top protection, and non-slip protective footwear. Some cleaning chemicals may require the use of a respirator mask (as instructed on chemical label).

Before using this washer, the user shall determine the suitability of this product for its intended use and assumes liability therein.

### **Read this Manual**

A	WARNING	
<b>Carefully read and follow all instructions</b> Improper use or maintenance of the pressur operator or bystanders from:	-	•
<ul> <li>Carbon monoxide poisoning</li> <li>Skin/eye injury from high</li> </ul>	<ul><li>Fire/explosion</li><li>Burns</li></ul>	<ul> <li>Chemical exposure</li> <li>Slips/falls</li> </ul>

*pressure spray* • Electric shock • Flying objects/debris

Keep this manual for reference and review. A summary of important safety information can be found at the end of the manual.

Proper preparation, operation, and maintenance of this pressure washer will result in optimal performance and a long life for this equipment. For detailed Engine operation and maintenance information, always refer to the Engine Owner's Manual furnished with the pressure washer.

#### **ATTENTION:**


#### **Rental Companies and Private Owners who loan this equipment to others!**


All persons to whom you rent/loan this pressure washer must have access to and read this manual. Keep this owner's manual with the pressure washer at all times and advise all persons who will operate the machine to read it. You must also provide personal instruction on how to safely set-up and operate the pressure washer and remain available to answer any questions a renter/borrower might have.

# Specifications


MODEL			
Model #	157598		
FLOW OUTPUT			
Pressure Rating	4000 psi		
Flow Rate	7 gpm		
Maximum Temperature	200° F		
DIMENSIONS	/ COMPONENTS		
Length	47.25"		
Width	53.75"		
Height	47.25"		
Weight	800 lbs.		
Pump Type	NorthStar TWS 7040		
Engine Horsepower	23.5 hp		
High Pressure Discharge Hoses	Two - 3/8" x 50'		
Chemical Injector	Maximum dilution ratio 15-to-1		
SUPPLIES REQU	JIRED (not included)		
Engine Fuel	Regular, Unleaded Gasoline		
Engine Oil	See Engine Owner's Manual		
Burner Fuel	#1 or #2 Diesel, B5 or lower Biodiesel, Kerosene, or Fuel Oil (Capacity: 15 Gal.)		
Pump Oil	Universal Tractor Transmission Oil or		
(shipped with oil, but refills required) Battery	SAE Non-detergent 30wt. 12 Volt, minimum 18 Amp/Hr. Standard top post mount automotive (Group 75)		
Input Water Supply	200 gal. tank recommended (customer supplied). Flow rate must be maintained at 8.4 gpm		
Input Water Supply Hose & Fittings	Hose and fittings included		

# Component Identification

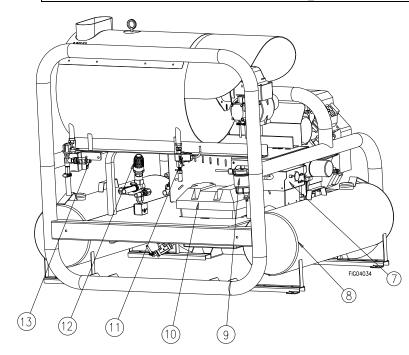

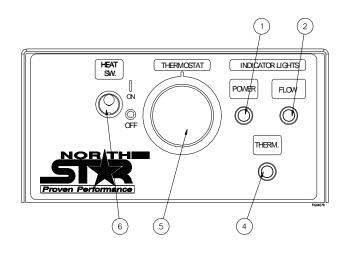


Ref #	Description	Ref #	Description
1	Indicator light (Power)	11	Flow Switch
2	Indicator light (Flow)	12	Unloader
4	Indicator light (Thermostat)	13	Water Outlet
5	Thermostat	14	Engine (see engine manual)
6	Heat Switch	15	Engine Key Switch
7	Control Panel	16	Pump
8	Gasoline Tank	17	Water Inlet
9	Water/Fuel Separator	18	Fuel oil/Kerosene/Diesel Tank
10	Battery box (battery not included)	19	Heat Exchanger

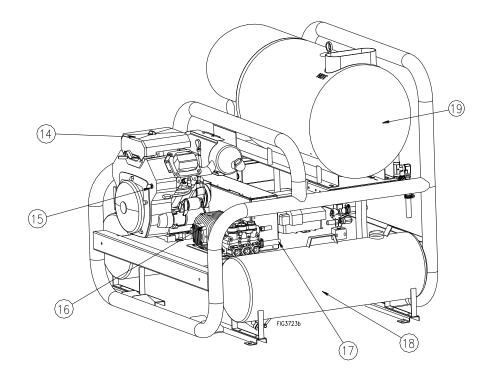

# Component Identification

REF	ERENCE GUIDE
1. Indicator Light (Power)	Instrument used to monitor unit operation. Should illuminate when the power switch is in the ON position.
2. Indicator Light (flow)	Instrument used to monitor unit operation. Illuminates if water is flowing through the spray gun.
4. Indicator Light (Thermostat)	Instrument used to monitor unit operation. Should be illuminated when the gun is in use and the burner is firing.
5. Thermostat	Adjust the water temperature.
6. Heat Switch	On/off device for power to burner components.
7. Control Panel	Flat surface for mounting switches.
8. Gasoline Tank	Fuel storage container.
9. Water/Fuel Separator	Used to remove contaminant water from gasoline or diesel
	fuel to prevent water in the fuel from reaching the engine.
10. Battery Box	Storage place to house the battery.
11. Flow Switch	A device that monitors flow.
12. Unloader	Valve that regulates pressure and directs flow into bypass when trigger is closed.
13. Water Outlet	Connect high pressure hose here.
14. Engine	The air-cooled engine powers the pump.
15. Engine Key Switch	Start engine by turning clockwise.
16. Pump	A device that moves fluid through a combination of suction and displacement.
17. Water Inlet	Used to connect water from the feed tank to the inlet plumbing.
18. Fuel Oil/Kerosene/Diesel Tank	Fuel storage container.
19. Heat Exchanger	Device that heats the water by forcing a flame across steel pipe.

### Safety Labeling

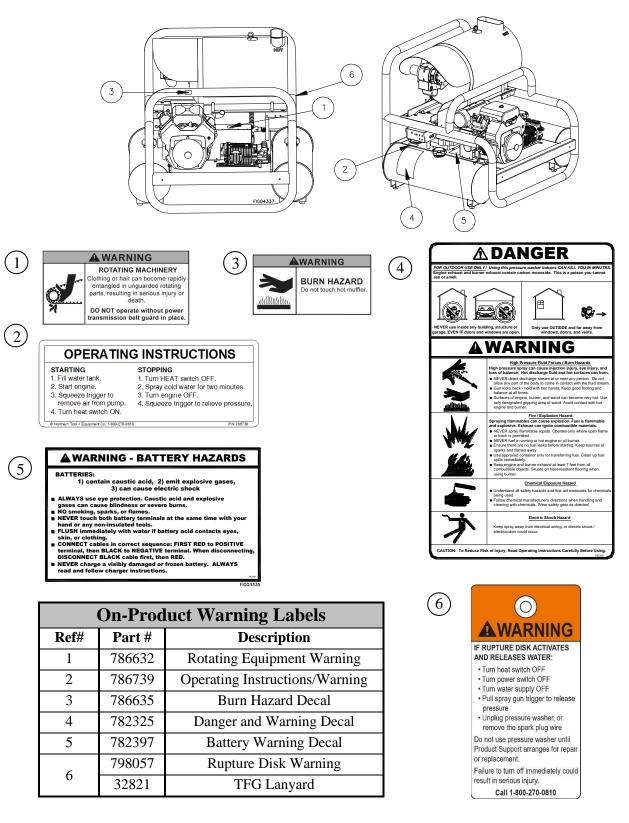

Always make sure safety labels are in place and in good condition. If a safety label is missing or not legible, order new labels or unsafe operation could result. To order replacement safety labels, call Northstar Product Support at 1-800-270-0810.

# Special Equipment Safety Features

High Pressure Safety Device (Rupture Disc)	WARNING-If the high-pressure safety device ever discharges water, turn the engine off and do not use the machine. The device will no longer function properly. See a dealer or call Product Support at 1-800-270- 0810. This unit is equipped with a high pressure safety device, which acts as a backup safety feature. If the unloader malfunctions, the high pressure safety device will open and relieve excess system pressure. High pressure safety device
High Temperature Limit	This unit is equipped with a high temperature limit that measures discharge spray temperature and automatically turns the burner off when the temperature setting is reached. When the discharge spray temperature drops, the burner automatically reignites.
Spray Gun Safety Latch	The spray gun is equipped with a built-in trigger safety latch to guard against accidental trigger actuation.

**Steps for Assembly / Initial Set-Up** 

Step 1. Unpacking & Delivery Inspection

Step 2. Attaching a Water Feed Tank (customer supplied)

**Step 3. Initial Pump & Engine Preparation** 


**Step 4. Battery Installation** 


Each of these steps is discussed in the below:

#### **Step 1. Unpacking & Delivery Inspection**

Find and separate the components identified in Figure 2 – Overview of Pressure Washer Components and Figure 3 – Hardware Bag. Inspect the power washer immediately after you receive delivery for missing parts and damage.

• If you have missing or damaged components, contact Product Support at 1-800-270-0810.

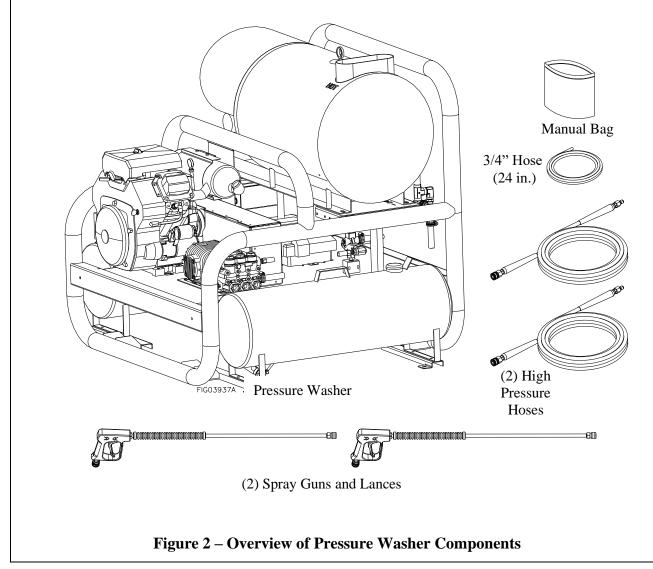

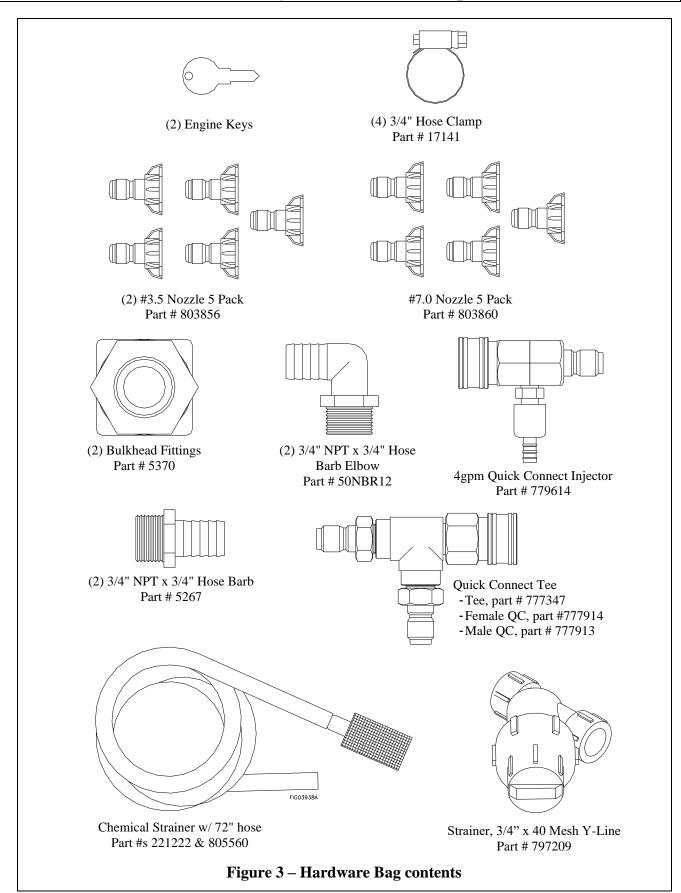


#### Step 2. Attaching a Water Feed Tank (customer supplied)

Water must be supplied to your pressure washer by an external water tank which you provide.

To connect an external water feed tank, follow the steps below:

**CAUTION:** Inadequate plumbing between a feed tank and the pressure washer can cause damage to the pump from cavitation. To avoid cavitation:

- Use 3/4" hose and fittings or larger. Hose should never be longer than 6'.
- Place feed tank so bottom of tank is level or higher than bottom of skid frame.
- Place the feed tank as close as possible to the pressure washer so the connection hose will be as short as possible.
- Make sure the connection hose does not kink.
- Never allow tank to run dry.

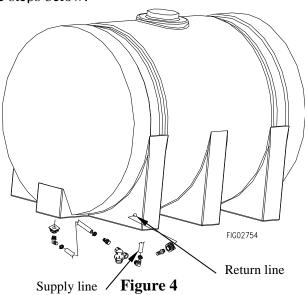

- **Step 1.** Supply a 200 gallon or larger water feed tank. (The necessary fittings have been provided with this pressure washer.)
- Step 2. Drill 1.5" diameter hole in the bottom of the tank for the supply line this is the supply port. Drill a second 1.5" diameter hole at least 1 foot away from the first hole for the return line this is the return port. Both holes need to be drilled on flat surfaces of the tank.
- Step 3. Insert supplied bulkhead fitting into each hole.
- **Step 4.** Thread the supplied <sup>3</sup>/<sub>4</sub>" elbow fitting into the supply port bulkhead fitting. Thread the supplied <sup>3</sup>/<sub>4</sub>" hose barb fitting into the return port bulkhead fitting.
- **Step 5.** Make sure the bottom of the water tank is level with or higher than the bottom of the skid frame.
- **Step 6.** Connect the supply line (3/4" hose provided): (See Figure 4)
  - Ensure the hose is connected to the water inlet on the pressure washer (see "Component Identification" section of this manual). Make sure the connection hose does not kink.
  - b. Connect the other end to the 3/4" elbow fitting on the y-strainer. Use the hose clamp that has been provided.
  - c. Connect the 24" length 3/4" hose between the y-strainer and the tank inlet fitting. Use hose clamps to secure the connection.

**Step 7.** Connect the return line: (See Figure 4)

- a. Connect one end to the 3/4" barb fitting in the return port on the water tank. Use the hose clamp that has been provided.
- b. Ensure the other end is connected to the bottom of the unloader on the pressure washer (see "Component Identification" section of this manual).

The tank is now ready to be filled.

**CAUTION:** To protect the pump, do not add cleaning chemicals directly to the tank water. Use the quick couple chemical injector provided and follow all instructions and precautions for chemical spraying – see "Operation Instructions, Step 2. Set Up for Chemical Spray" section in this manual.

	Step 3. Initial Pump & Engine Preparation	
Prepare Water Pump	Verify pump oil level. Note: The pump is shipped <u>with</u> oil.	
	<ol> <li>Verify that oil level is half way up the sight glass (or at the indicator line on the dip stick).</li> </ol>	
	<ol> <li>If oil level is low, fill using Universal Tractor Transmission Oil or SAE Non-detergent 30wt. oil.</li> </ol>	
	3. Replace oil fill cap. Oil fill cap	
	Sight glass Figure 5	
Prepare Engine	Fill the engine with oil. Note: The engine is shipped <u>without</u> oil.	
	Refer to the Engine Manual to locate oil-fill port and for instructions on filling. Use the oil grade and quantity specified in the Engine Manual.	

#### **Step 4. Battery Installation**

Install a 12-volt standard, top-post mount, automotive battery (Group 75) with a minimum 18 amp-hour rating. The engine will not run and the burner will not fire unless a battery is installed.

The battery is to be supplied by the customer and should be installed in the protective battery compartment located near the engine. The inside dimensions of the battery compartment are 11-1/8"L x 7-3/4"W x 10-1/8"H.

Follow the steps below for connecting and disconnecting the battery.

#### **A**WARNING: Battery Hazards

Batteries are hazardous because they contain caustic acid, can emit explosive gases, and can cause electric shock. Caution must be exercised when making connections to a battery to avoid shock and contact with the acid, and to prevent any sparking that could lead to an explosion. ALWAYS follow the general battery safety rules and instructions listed below.


General Battery Safety Rules	<ul> <li>ALWAYS use eye protection and protective clothing when handling batteries.</li> <li>NEVER smoke or work near sparks or other sources of ignition.</li> <li>NEVER touch both battery terminals at the same time with your hand or any non-insulated tools.</li> <li>If battery acid contacts skin or clothing, flush immediately with water and neutralize with baking soda.</li> </ul>
Connecting the battery	<ol> <li>Always connect the cables in the following sequence to avoid possible shock:</li> <li>1. Find the battery cables located inside the battery compartment.</li> <li>2. Connect the <i>red</i> cable to the <i>positive</i> (+) terminal of the battery.</li> <li>3. Then connect the <i>black</i> cable to the <i>negative</i> (-) terminal of the battery.</li> </ol>
Disconnecting the battery	<ul> <li>Always disconnect cables in the following sequence to avoid possible shock.</li> <li>1. First, disconnect the <i>black</i> cable from the <i>negative</i> (-) terminal of the battery.</li> <li>2. Next, disconnect the <i>red</i> cable from the <i>positive</i> (+) terminal of the battery.</li> <li>3. Remove the battery from the battery compartment.</li> </ul>

### Moving and Handling

#### **A**WARNING

The pressures washer is heavy. You can be injured when trying to lift it without mechanical assistance. It can crush and cause serious injury if it drops on someone. Follow the instructions below for safely moving the pressure washer.

To reduce risk of injury, only lift the pressure washer from underneath using a pallet jack or forklift.

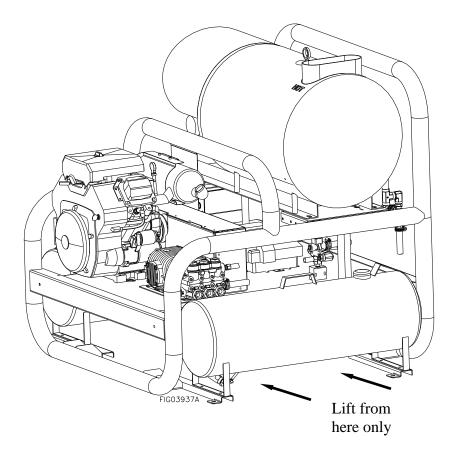

#### Follow the steps below prior to each use of the pressure washer.

#### **Steps to Follow Before Each Use**

**Step 1. Check Equipment** 

Step 2. Add Fuel(s)

Step 3. Select Suitable Worksite

Step 1. Check Equipment	
Check/add pump oil	<ul> <li>Check/add pump oil.</li> <li>Caution: Never run the pump without sufficient lubrication!</li> <li>1. Check oil level. Verify that oil level is half way up the sight glass (or at the indicator line on the dip stick).</li> <li>2. If oil level is low, fill using Universal Tractor Transmission Oil or SAE Non-detergent 30wt. oil.</li> <li>3. Replace oil fill cap.</li> </ul>
Check/add engine oil	<ul> <li>Check the engine oil level and add oil as needed.</li> <li>Use the recommended oil type for your engine and expected ambient conditions.</li> <li>(See engine Owner's Manual for oil type and capacity, and more detailed oil check/fill instructions.)</li> <li>▲ WARNING: Burn hazard</li> <li>Never open oil port while engine is running. Hot oil can spray over face and body.</li> <li><u>Notes:</u></li> <li>• Low oil shutdown feature prevents the engine from starting without sufficient oil.</li> <li>• Engine is shipped without oil. You must add oil before first use.</li> </ul>
Inspect spray system	<ul> <li>Always inspect spray system for damage and leaks before each use.</li> <li>Do not start pressure washer until all needed repairs have been completed.</li> <li>ARNING: High pressure fluid injection hazard</li> <li>High-pressure fluid discharge from leaks (even pin-sized) or ruptured components can pierce skin and inject fluid into the body. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene, and possibly amputation.</li> <li>Never use a finger or skin to check for leaks.</li> <li>Never operate machine with damaged or missing hoses/parts.</li> <li>Never attempt to repair a high-pressure hose or component – Always replace it with a part that is rated at or above the pressure rating of this machine.</li> </ul>

	<ol> <li>Check hoses, fittings, wand, trigger gun and connections for signs of wear, cracks, looseness, or leaks. Replace as required.</li> <li>Check and clean the nozzle orifice.</li> <li>Clean inlet filter. (See Maintenance instructions)</li> </ol>
Inspect fuel system	<ul> <li>Always inspect (engine and burner) fuel systems &amp; check for leaks</li> <li>BEFORE starting pressure washer.</li> <li>Do not start pressure washer until all needed repairs have been completed.</li> <li>WARNING: Fuel leak hazard</li> <li>Gasoline and burner fuels are highly explosive and fuel leaks can result in fire or explosions. You can be burned and seriously injured if the fuel system is not properly hooked up or there is a fuel leak when you start the engine.</li> <li>Inspect the entire fuel system. Look for: <ul> <li>signs of leaks or deterioration,</li> <li>chafed or spongy fuel hose,</li> <li>loose connections,</li> <li>loose or missing fuel hose clamps,</li> <li>damaged gasoline tank, or</li> <li>defective gasoline shut-off valve.</li> </ul> </li> </ul>
Perform other scheduled maintenance as needed	<ul> <li>Make sure that any other regular maintenance has been performed as prescribed in this manual in the "Maintenance &amp; Repair" section.</li> <li>1. Refer to the engine owner's manual for engine maintenance instructions.</li> <li>2. Make sure battery is charged. Charge as needed according to your battery manufacturer's instructions.</li> </ul>

#### Step 2. Add Fuel(s)

#### **A**WARNING: Fuel fire/explosion hazard

Gasoline is highly flammable and explosive. Burner fuels are combustible at warm temperatures. Heat, sparks, and flames can ignite fuel vapors, which can become widespread during fueling. A flash fire and/or explosion could result and cause serious injury or death. Always use extreme care when handling fuels. Carefully follow all instructions to avoid the following conditions which could result in fuel ignition:

- gas vapor collection inside enclosures
- static electric sparks
- sparks from electric wiring, batteries, or running engines
- sources of heat (such as a hot engine, burner or exhaust)
- open flames, including pilot lights



FEDERAL LAW prohibits the use of

-	ese general safety rules when fueling:		
1) Turn pressure washer off and allow to cool for at least two minutes before removing any fuel cap.			
	ning or still-hot engine or burner is hot enough to ignite fuel.		
	UTDOORS – never indoors. Fuel vapors can ignite if they collect inside and xplosion can result.		
3) Stay away from	all sources of heat, sparks, and flames. Do not smoke.		
· · ·	el directly into the gas tank or burner at a gas station – it could cause a static Follow these steps to avoid static electric sparking during fueling:		
tanl bec • Alv con	e an approved portable container to transfer fuel to the pressure washer's k. (A portable container made of metal or conductive plastic is preferred ause it dissipates charge to ground more readily.) ways place container on the ground to be filled. Never fill the portable gas tainer while it is sitting inside a vehicle, trailer, trunk, or pick-up truck		
Dis     by t     Kee	<ul> <li>bed.</li> <li>Dissipate static charge from your body before beginning the fueling process by touching a grounded metal object at a safe distance from fuel sources.</li> <li>Keep nozzle in contact with container while filling. Do not use a nozzle lock-open device.</li> </ul>		
5) Clean up fuel s	pills /splashes immediately.		
Wi     eng     Fue	bossible, move the pressure washer away from spilled fuel on the ground. pe up spilled fuel and wait 5 minutes for excess fuel to evaporate before starting gine. el soaked rags are flammable and should be disposed of properly. fuel is spilled on your skin or clothes, change clothes and wash skin immediately.		
Fill engine fuel tank	<b>Check the gasoline tank level. If needed, fill tank</b> with fresh unleaded gasoline from a portable container:		
	1) Remove engine gas cap.		
	2) Add gasoline through the fill opening:		
	- Use only a <u>UL-approved portable gasoline container</u> to transfer the gasoline to engine's tank.		
	- Do NOT overfill the gasoline tank. Allow at least 1/2" of empty space below the fill neck to allow for fuel expansion.		
	3) Replace gas cap securely before starting engine.		
	4) Store extra gasoline in a cool, dry place in an UL-approved, tightly sealed container.		
Fill burner fuel tank	If you are planning to use heated water, fill burner fuel tank with #1 or #2 diesel, B5 or lower biodiesel, kerosene, or fuel oil.		
(if planning to	1) Remove burner fuel cap.		
use heated water)	<ol> <li>Add fuel through the fill opening. Do not overfill. Allow at least 1/2" of empty space below fill neck to allow for fuel expansion.</li> </ol>		

- 3) Replace fuel cap securely before starting engine.
- 4) Wipe any excess fuel from unit before starting

#### Step 3. Select Suitable Outdoor Worksite

Before using the pressure washer, you must understand the criteria for selecting a suitable location for operation. Note that this pressure washer is for OUTDOOR USE only.

#### **A**WARNING:

You must choose a suitable site for operating your pressure washer to avoid equipment damage and/or injury and possible death from carbon monoxide poisoning, fire/explosion, uncontrolled equipment movement/tip over, or slips and falls. Choose a site that meets all of the following five criteria:

- 1. OUTDOORS only, and away from all building windows and air intakes.
- 2. Where no flammable vapors, dusts, and gases are present.
- 3. Where there is adequate, unobstructed ventilation airflow.
- 4. With adequate clearance from combustible materials.
- 5. On a firm, level, heat-resistant surface with good drainage.

Detail regarding each of these criteria are provided below.

1. Outdoors ONLY	A DANGER: Carbon monoxide poisoning hazard Exhaust fumes from both the engine and the burner contain carbon monoxide (CO), a poisonous gas you cannot see, smell, or taste. The CO generated by the power washer can rapidly accumulate, even in areas that appear to be well ventilated, resulting in dangerous and fatal concentrations within minutes. Follow the directions below for choosing a location to operate your pressure washer in order to avoid carbon monoxide poisoning.
	The location you choose to operate the pressure washer must be OUTDOORS and away from all building air intakes.
	• Never run the pressure washer in an enclosed or partially enclosed location such as a building, garage, barn, shed, or house. <i>These spaces can trap poisonous gases. Running a fan or opening windows will not provide adequate ventilation to prevent dangerous CO build-up.</i>
	• Only use the pressure washer outdoors and far away from open windows, doors, and building or vehicle vents.
	• Place the pressure washer so that the exhaust fumes will not be directed towards people or building air intakes.
	• Ensure that working, battery-operated or battery back-up carbon monoxide alarms are used in any dwelling/structure that is in close proximity to the running pressure washer.
	• Note that this pressure washer is NOT designed or approved for use in vehicles or marine applications. Never run the pressure washer inside RVs or other vehicles, on boats, or on pick-up truck beds.

	<b>WARNING:</b> Never attempt to attach ductwork to the engine muffler or burner exhaust to allow for installation inside an enclosure. This could cause hot air deflection, heat build-up, and increased exhaust back-pressure, resulting in possible exhaust leakage or overheating and damage to the pressure washer.
2. Away from combustible dust, liquids, or vapors	<b>Do not locate and use the pressure washer in the presence of flammable vapors, dust, gases, or other potentially combustible materials.</b> Burner is an open flame, which can ignite airborne dusts and flammable vapors. Operate only where open flame or torch is permitted.
3. Adequate ventilation airflow	The pressure washer needs adequate, unobstructed flow of air to allow for proper combustion and adequate cooling. Proper combustion can only be obtained when there is a sufficient supply of oxygen available for the amount of fuel being burned. Cooling ventilation is required to prevent overheating of the pressure washer and possible fire.
	• Situate so there is adequate clearance around pressure washer to allow for airflow – at least 7 feet from any non-combustible wall or obstruction.
	• Never place any objects against or on top of the pressure washer.
	• Do not operate with a tarp, blanket, or cover surrounding the pressure washer.
4. Hot exhaust clearance	The exhaust gas from your pressure washer is extremely hot and can cause combustible materials to catch on fire.
	• Make sure both the engine exhaust and burner exhaust are at least 7 feet from all combustible materials and buildings/structures during operation.
	• Equip the engine with a spark arrestor if the pressure washer will be used near any ignitable forest, brush, or grassy land. (See the engine manual provided with this equipment to determine if the engine is already equipped.) Make sure you comply with applicable local, state, and federal codes.
	• Keep a fire extinguisher rated "ABC" nearby. Keep it properly charged and be familiar with its use.
5. Firm, level, heat-resistant surface	The pressure washer should be positioned on a firm, level (less than 3 degree slope), heat-resistant surface with good drainage. Ensure that the pressure washer sits level and will not slide or shift during operation. If applicable, block the pressure washer's wheels to prevent movement. Surface should be heat resistant if you will be using the burner for heated spray.

After you have checked and fueled the equipment and positioned it in a suitable worksite, it is time to start your pressure washer. The following are the procedures necessary for safe, successful operation of your pressure washer.

#### **A** WARNING

Carefully read and follow all instructions and safety information for using this pressure washer. Improper use or maintenance of the pressure washer can result in *serious injury or death* to the operator or bystanders from:

•

Carbon monoxide poisoning • Skin/eye injury from high

pressure spray

•

- Fire/explosion • **Burns** •
  - Slips/falls • Electric shock

Chemical exposure

Flying objects/debris •

 
<b>Operating Instructions</b>
Step 1. Connect Hoses, Water Supply, and Spray Nozzle
Step 2. Set Up for Chemical Spray (if desired)
Step 3. Spraying
Step 4. Stopping

Each of these procedures is discussed in detail below:


Step 1. Connect Hoses, Water Supply, and Spray Nozzle		
Position pressure washer for use	<ul> <li>Place pressure washer in a suitable location for use, as directed in the "Before Each Use, Step 3: Select Suitable Worksite" section of this manual. A suitable location is:</li> <li>OUTDOORS only, away from all building air intakes.</li> <li>Where no flammable vapors, dusts, and gases are present.</li> </ul>	
	<ul> <li>Where there is adequate, unobstructed ventilation airflow.</li> <li>With adequate clearance from combustible materials.</li> <li>On a firm, level, heat-resistant surface with good drainage and nearby access to a continuous water supply.</li> </ul>	
	A DANGER: Carbon monoxide poisoning hazard Exhaust fumes from both the engine and the burner contain carbon monoxide (CO), a poisonous gas you cannot see, smell, or taste. The CO generated by the power washer can rapidly accumulate, even in areas that appear to be well ventilated, resulting in dangerous and fatal concentrations within minutes. ONLY run pressure washer OUTDOORS and away from air intakes. NEVER run pressure washer inside any enclosed or semi- enclosed spaces, including homes, garages, basements, sheds, boxes, pick- up truck beds, RVs, or boats. These spaces can trap poisonous gases, EVEN if you run a fan or open windows.	
Fill water tank	<ol> <li>Make sure you have followed all instructions provided in this manual for attaching a water feed tank. (See Assembly/Initial Set-Up section, "Step 2. Attaching a Water Feed Tank".)</li> </ol>	

	2. Ensure the water in your tank is clean. Debris can cause excess pump wear and reduce performance.
Attach high pressure hose	Attach high pressure hose(s) to the pressure washer's water outlet. Attach high pressure hose(s) to the pressure washer's water outlet. WARNING: NEVER operate this pump with components (such as hose, connections, and spray gun) rated for lower pressure and/or temperature limits than the machine's maximum rated pressure and temperature, or component could rupture and cause serious personal injury from escaping high pressure fluids.
	<ol> <li>See "Machine Component Identification" section of this manual for location of the pressure washer's water outlet.</li> <li>If you want to use two guns, install the two-nipple adapter on the water outlet. (Remove the adapter for single gun use.)</li> <li>The high pressure hoses are equipped with quick couplers. To connect the hose(s), simply pull the collar back and push the coupler onto the water outlet nipple. (Figure 8a). The collar should slide over the ball bearings.</li> </ol>
	Coupler High Pressure Output
	<b>Figure 8a</b> 4. Release the collar, making sure it springs back and re-seats to its original (non-retracted) position. (Figure 8b). <i>Check the connection by pulling on</i> <i>the hose to ensure a positive connection.</i>
	<u>Correct</u> Insertion
	Collar Seated Collar NOT Seated Figure 8b
Select spray nozzle	Your pressure washer is equipped with twelve high-pressure nozzles (eight #3.5 nozzles and four #7.0 nozzles) and three low-pressure nozzles (two #3.5 and one #7.0).

	Select nozzles based on the typ	be of job you are do	bing (color of nozzle) and
	whether you are using two guns or one (size of nozzle).		
	1. One gun vs. two gun use:		
	a) Use a #7.0 nozzle for <u>si</u> flow and psi are achieve		. This will ensure the rated
	b) Use two #3.5 nozzles w	hen operating dual	l guns.
	2	zzles and one operato through the second on a 3.5 to 7 GPM. This without warning, wh	or releases the trigger
	2. Type of cleaning job: Select the appropriate color Generally, the wider the spin pressure produced.		based on the following table. zzle, the lower the spray
	Color of Nozzle:	Spray Angle	Used For:
	Red	0	Highest Impact
	Yellow	15	Tough Stains/Stripping
	Green	25	General
	White	40	Light Cleaning
	Black-Low pressure	65	Chemicals
Attach nozzle	on each gun you wil and plain water out of	chemicals, you w ll not be able to sp f the other gun at	ill need a black, #3.5 nozzle oray chemicals out of one gun
	Attach nozzle to the spray gu WARNING: Depressurize first Any time you remove / install / change a nozzle, you must depressurize hose line by squeezing the spray gun trigger while the engine is off. Even if the engine has been off for a long period of time, the hose may remain dangerously	11.	Nozzle



2. To install the nozzle, pull the collar back and twist the nozzle firmly into the coupler on the end of the wand. (Figure 9a)

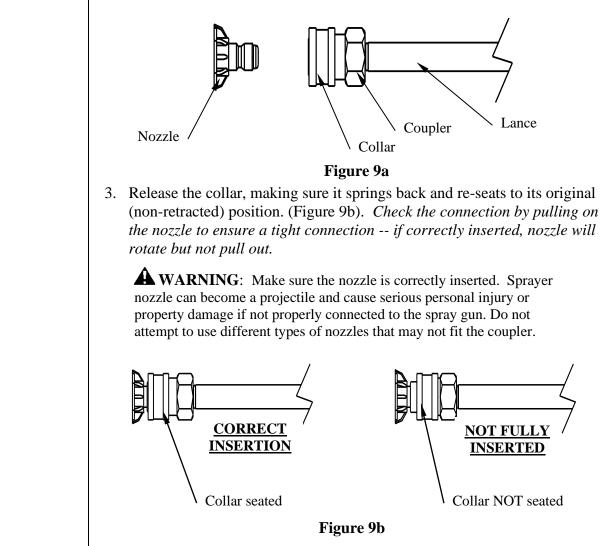

#### Step 2. Set Up for Chemical Spray (if desired)

Using the proper cleaning chemical for the application can speed up cleaning jobs tremendously.

**Your pressure washer is equipped with a quick connect chemical injector,** which siphons cleaning chemicals into a low-pressure washer spray downstream of the pump. Adequate suction pressure is created *only when the low pressure (black) spray nozzle* is used.

The introduction of cleaning chemicals via the chemical injector affords the following advantages:

• It protects the pump from damage because no chemical passes through the pump.

CAUTION: Certain chemicals, such as bleach or those containing muriatic acid, will
cause pump damage if introduced upstream through the pump's water inlet.

• It mixes the cleaning chemical into a low pressure spray. Cleaning chemicals applied under low pressure adhere better to the surface being cleaned, allowing the formula time to react and remove dirt more effectively.

Note: An external *chemical injector pump* is not recommended for use with this pressure washer.

#### **A**WARNING: Chemical spraying

- Never spray acids, corrosives, or abrasive or flammable liquids. Breathing hazards, surface burns/corrosion, or fire/explosion could result.
- Follow the chemical manufacturer's label instructions for proper use and handling of the chemical. Understand all safety hazards and first aid for all chemicals being used. Always wear protective gloves when handling and cleaning with chemicals, and wear other protective gear as directed by chemical manufacturer. Always dispose of hazardous fluids per local, state, and national guidelines.

Acquire cleaning chemical	Use only NorthStar pressure washer chemicals or chemicals specifically formulated for use with pressure washers. CAUTION: Non-approved chemicals can damage pressure washer components (seals, wand, hoses, pump, etc.) and be harmful to the environment.
Prepare for chemical spray (if planning to use)	<ul> <li>Prepare the pressure washer for chemical spraying using the following steps:</li> <li>1. Prepare (dilute) the chemical cleaning solution as required for the job. (Note: The chemical injector is adjustable and will mix the chemical solution into the spray up to a maximum ratio of 1 part chemical solution to 13 parts water.)</li> <li>2. Disconnect the high pressure hose from the water outlet.</li> <li>3. Snap the quick couple chemical injector onto the water outlet, then snap the high pressure hose onto the chemical injector. See Figure 10.</li> <li>Adjustment Knob Water Outlet Chemical Injector</li> <li>Figure 10</li> </ul>


<ul> <li>4. Submerge the suction strainer connected to the braided chemical hose into a bucket containing the chemical solution. See Figure 10.</li> <li>Step 3. Spraying</li> </ul>		
	<ul> <li>Stay alert. Watch what you are doing at all times.</li> <li>Clear work area. Clear the work area of all bystanders. Keep children and pets away.</li> <li>Dual gun use. During dual gun use, stay aware of the other operator's location at all times and keep spray directed away from them.</li> <li>Keep spray away from electrical wiring. Spray contact with electrical wiring will likely result in severe electrical shock or electrocution.</li> <li>Hot exhaust/parts. Stay clear of engine and burner exhausts. Never touch hot engine muffler, burner/heating coil, or other hot surfaces. All are very hot and will burn you Do not direct spray at this machine. Do not attempt to clean this machine with it own spray. Engine damage will result. Cleaning should be done with a damp</li> </ul>	
	<ul> <li>sponge with the engine OFF.</li> <li>Let engine cool at least two minutes before refueling.</li> <li>Avoid inhalation of exhaust. This product emits CO and chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.</li> </ul>	

	<ul> <li>Never pull by hose. Do not move this machine by pulling on the hose. Hose or connections could fail and result in catastrophic high pressure release of fluid as well as hose whipping.</li> <li>Avoid sharp objects. Keep hose away from sharp objects. Bursting hoses may cause injury.</li> <li>No load bearing. Do not use the pump to support other items of equipment that impose unacceptable loads on the pump. Do not attempt to use this machine as a prop.</li> <li>Lock trigger safety latch when not spraying. Spray gun is equipped with a built-in trigger safety latch to guard against accidental trigger release. Rotate safety latch to the locked position when not spraying.</li> <li>Leaving unattended. Always turn off the pressure washer and relieve system pressure before leaving the sprayer unattended.</li> <li>Prompt Emergency Response</li> <li>Seek medical aid for suspected injection injury. If injured by high-pressure fluid, no matter how small the wound is, see a doctor at once. A typical injection injury may be a small puncture wound that does not look serious. However, severe infection or reaction can result if proper medical treatment is not administered immediately by a doctor who is familiar with injection injuries.</li> <li>Seek medical aid for suspected carbon monoxide poisoning. The running engine gives off carbon monoxide, a poisonous gas that can kill you. If you start to feel sick, dizzy, or weak while using the pressure washer, shut off the engine and get to fresh air RIGHT AWAY. See a doctor. You may have carbon monoxide poisoning.</li> </ul>
	monoxide poisoning.
Put on personal protective gear	<ul> <li>WARNING: Use personal protective gear to prevent:</li> <li>Eye and skin injection injury from high pressure spray</li> <li>Burns from hot water or steam</li> <li>Eye injury from flying debris</li> </ul> 1. Wear waterproof, thermally insulated gloves, safety glasses with side and top protection, face protection, and protective clothing when operating the machine. If spraying pressure washer specific chemicals, wear a respirator mask to avoid inhalation of vapors if directed on the chemical label. 2. Wear non-slip, protective footwear. Use of pressure washer can create puddles and slippery surfaces. Wear footwear capable of maintaining a good grip on wet surfaces.
Prime the water supply	<ul> <li>Prime the water supply.</li> <li>CAUTION: Never run the pump without the water supply connected and primed. Operating the pressure washer without a sufficient incoming flow of water will damage the pump.</li> <li>Make sure the water feed tank contains adequate water.</li> <li>Make sure the supply hose from the tank is not kinked. A kinked hose will provide insufficient water supply to the pump and reduce its life. Make sure the hose remains unkinked after moving the pressure washer.</li> </ul>

	• Purge air from the water supply hose by squeezing the trigger until a steady stream of water flows out of the nozzle at low pressure. (Air in the hoses can cause damage to the pump, so always make sure all the air is out of the hoses before starting the pressure washer engine.)
Start engine	Start the engine to power the pump.
	<ol> <li>Make sure water supply is connected and primed. CAUTION: Running the pump dry will cause damage and void the warranty.</li> </ol>
	2. To prevent accidental spraying, engage the safety latch on spray gun trigger by rotating it to the locked position.
	3. Follow the instructions in the Engine Manual for starting the engine.
	- If the engine doesn't start on the first try, pressure may build up in the pump. Relieve pressure by squeezing the spray gun trigger before attempting to start engine again. This will make starting easier.
	<b>DANGER:</b> Do not inhale engine exhaust. It contains dangerous carbon monoxide that can kill you.
Apply cleaning chemical	If desired, spray cleaning chemical at low pressure (with or without heated water).
(if desired)	1. Make sure the chemical injector is properly set up according to the instructions in Step 2, "Set Up for Chemical Spraying".
	2. Make sure the low pressure BLACK nozzle is attached before beginning to spray chemicals Only the low pressure black nozzle will allow chemicals to be drawn through the chemical injector into the water stream.
	<u>Note regarding dual gun chemical spraying</u> : You can spray chemicals with one gun or both guns (with black nozzles inserted). However, you cannot spray chemicals out of one gun and plain water out of the other gun at the same time – the chemical-mixed water flows to both hoses
	3. You can apply chemicals with either warm or cold water. Check chemical label. If warm water is specified, start burner according to instructions provided below.
	4. Apply chemicals by squeezing the spray gun trigger. The chemical injector will draw the chemical into the water stream.
	5. The chemical concentration of the spray can be changed by turning the chemical adjustment knob located on the chemical injector.
	6. Apply chemicals evenly to the cleaning surface. Never use more chemical than is necessary to clean the surface.

	7. Allow the chemicals time to react with the dirt before rinsing.
	8. Prepare to rinse by changing to a high-pressure nozzle. Changing the nozzle from the low-pressure black nozzle to a high-pressure nozzle will stop the flow of chemicals into the water stream.
	<i>Refer to instructions for selecting and changing the nozzle in Step 1, "Connect Hoses, Water Supply, and Nozzle".</i>
	9. Rinse with high-pressure spray, either hot or cold, as instructed below.
Turn on burner	If HOT spray or steam is desired, turn on the burner:
(If hot spray or steam is desired)	1. First make sure vicinity is free of flammable vapors, dust, gases, or other potentially combustible materials. Operate only where open flame or torch is permitted.
	2. Make sure there is fuel in the burner fuel tank.
	CAUTION: Do not run the machine in hot mode without fuel in the burner's fuel tank, or damage can occur.
	3. Make sure the engine throttle is all the way open. If it is not, the engine will not supply adequate voltage to the burner, resulting in smoke coming from the heat exchanger during operation.
	Turn the heat switch ON and adjust the thermostat to the desired temperature.
	A warning:
	<ul> <li>NEVER attempt to immediately run or re-light the burner if it doesn't ignite the first time. Unburned oil or gas may have accumulated, causing potential explosion or fire hazard.</li> <li>Do not attempt to set temperature limit above the preset limit.</li> <li>Never touch hot burner surfaces and stay clear of burner exhaust. All are very hot and will burn you.</li> <li>Do not inhale burner exhaust. It contains dangerous carbon monoxide that can kill you.</li> </ul>
	<ol> <li>The burner will fire when the trigger is squeezed – follow instructions for spraying.</li> </ol>
	Note: If burner exhaust is white, adjust burner for peak performance. See the "Oil Burner Adjustment Instructions" step in the "Set-Up" section of this manual.
	<ul> <li>5. When the trigger is released, a pressure switch automatically turns the burner off. Also, when the temperature setting is reached, the thermostat automatically turns the burner off.</li> <li><b>WARNING:</b></li> </ul>
	It is important that the burner stops firing when the trigger is released. If the burner remains firing, discontinue use until the

	pressure washer is serviced. Extremely high temperatures can result in serious injury and equipment damage.
Begin high pressure spray	High Pressure Spray Procedure
spray	<ul> <li>AWARNING: High pressure spraying safety</li> <li>Keep spray away from people. Never direct discharge stream at or near any person. Do not allow any part of the body to come in contact with the fluid stream. High-pressure spray can cause serious skin, eye, or falling injuries, and hot water can burn. Injection injury will occur if high-pressure spray pierces the skin, injecting liquid under the skin. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene and possibly amputation. Seek medical attention.</li> <li>Do not secure trigger open. To reduce risk of injury, do not attempt to secure the spray gun open by blocking or tying the spray gun in the open position.</li> <li>Prevent slips / loss of balance. High-pressure spray could cause you to lose balance from kickback forces, and wet surfaces can be slippery.</li> <li>Keep good footing and balance at all times. Do not overreach.</li> <li>Do not stand on unstable support when spraying.</li> <li>If spraying from an elevated surface, use fall protection because spray gun kickback can propel you off the elevated surface. When spraying from a ladder or scaffolding, ensure it is firmly anchored from sway or tip-over.</li> <li>Be aware of puddles and slippery surfaces. Ensure there is adequate drainage to prevent pooling of water.</li> <li>Prevent surface damage &amp; flying debris – Surfaces being sprayed must be strong enough to withstand high-pressure spray or damage may result. In addition, high-pressure spray will dislodge unsecured objects as well as surface chips and debris, resulting in hazardous flying objects that can cause personal injury or property damage. Do not spray brittle surfaces or breakable, fragile, or unsecured objects such as:     stucco or laminar flagstone     some painted surfaces     windows or glass doors (because they may break)     light fixtures, flowerbeds, mailboxes     unsecured, lightweight objects</li> </ul>
	<ul><li><u>Procedure</u>:</li><li>1. Put on one of the high-pressure spray nozzles (always relieve system)</li></ul>
	<ul><li>pressure first and follow instructions for attaching a nozzle).</li><li>Clear the cleaning area of all persons. Keep children and pets away.</li><li>Hold the spray gun firmly with two hands and a sturdy stance Gun kicks back when triggered.</li></ul>
	<b>A</b> CAUTION: Spray gun metal gets extremely hot when using the burner and can burn you on contact. Never touch the metal

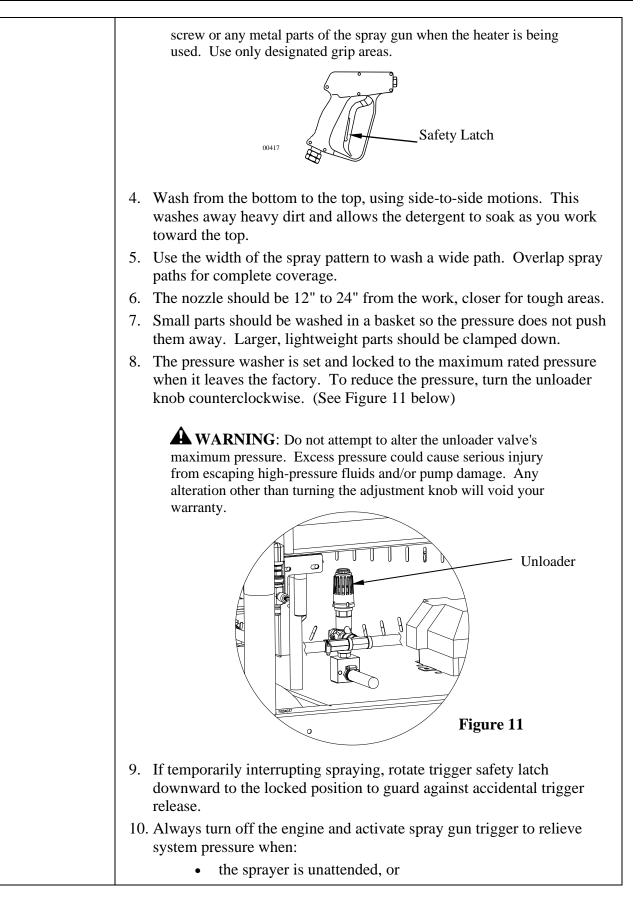

• disconnecting hoses, installing/cleaning nozzles, or servicing the pump.

#### **A** WARNING:

Always turn off the engine and relieve system pressure when finished spraying or when leaving sprayer unattended. Serious injury could result from unintentional release of high-pressure spray.

#### **Step 4. Stopping**

#### Stop the engine using the following steps:

#### **A** WARNING:

Never disconnect the high-pressure hose from the pump or spray gun while the system is pressurized. Relieve pressure by squeezing the spray gun trigger after the engine is turned OFF.

- 1. If the heater was used, turn heat switch OFF and run cold water through the coil for at least 3 minutes while spraying.
- 2. Turn engine OFF.
- 3. Turn water supply OFF.
- 4. Actuate spray gun trigger to relieve system pressure.
- 5. Remove garden hose.
- 6. Remove pressure hose. If chemicals were used, remove quick connect chemical injector from the pressure hose and water outlet.
- 7. Remove nozzle from spray gun.
- 8. Turn gasoline line valve to the OFF position.
- 9. Cool engine at least five minutes before storing -- A hot engine is a fire hazard.

### Storage

#### Storage

When you are finished using the pressure washer, you must prepare the sprayer for storage and store it in a proper location. Note:

- **If you will be storing the sprayer in freezing conditions**, follow the instructions for preparing the sprayer for storage in freezing conditions.
- If you will not be using the sprayer again for 30 days or more, follow the instructions for preparing the engine for long-term storage.

#### **A** WARNING

- Fuel and its vapors can ignite and cause a fire. Select a well-ventilated storage area away from sources of heat, flame, or sparks.
- A hot engine can ignite flammable materials. Always let engine cool at least five minutes before storing.

Detailed instructions are provided below.

Choose a storage location	<ul> <li>Choose a storage location that is:</li> <li>Clean and dry.</li> <li>Away from sources of heat, open flames, sparks, or pilot lights, even if the pressure washer's engine and burner fuel tanks are empty. Residual fuel fumes from tank can ignite.</li> <li>Away from extreme high or low temperatures. Do not store the pressure washer in freezing conditions unless it is prepared as directed below for those conditions.</li> </ul>
Perform regular maintenance	<b>Perform periodic maintenance</b> as directed in this manual to keep the pressure washer in safe working condition.
Prepare pressure washer for freezing conditions (if needed)	<ul> <li>If you will be storing the pressure washer in freezing temperatures, you must properly prepare the pressure washer to prevent water from freezing in the system.</li> <li>CAUTION: <ul> <li>Do not allow water to freeze in the pressure washer, high pressure hose, or spray gun. Freezing water can cause damage to the equipment and cause the spray gun to fail in the open position. A spray gun that has failed in the open position can whip around and cause personal injury when the pressure washer is started.</li> </ul> </li> <li>Short Term freeze protection: (Less than 30 days) <ol> <li>Drain water from the feed tank.</li> <li>Drain water from the heating coil by extending both high pressure hoses straight. Place the end of each hose at a level below the pressure washer. Remove the spray guns from the hoses.</li> </ol></li></ul>

# Storage

	<ol> <li>Using a wrench, disconnect the plumbing that connects to the heating coil inlet. The water will flow out of the heating coil. This will protect the coil from freeze damage.</li> <li>Open both water inlet ball valves and remove the cap from the water filter. This will drain the pump and water inlet plumbing.</li> <li>Long Term freeze protection: (For more than 30 days)</li> <li>RV antifreeze will save the components from freeze damage and keep them lubricated.</li> <li>Drain water from the feed tank.</li> <li>Disconnect both high pressure hoses from the high pressure water outlet fitting.</li> <li>Fill feed tank with 5 gallons of RV antifreeze.</li> <li>Run the engine (with burner off) until RV antifreeze comes out of both high pressure water outlet openings.</li> <li>Make sure excess antifreeze is disposed of safely.</li> </ol>
Prepare engine for long term storage (if storing more than 30 days)	<b>First prepare the engine for long term storage if you will not be using the pressure washer again for more than 30 days.</b> Fuel can become stale when stored over 30 days. Stale fuel causes acid and gum deposits to form in the fuel system which can cause malfunction of the engine.
	<ol> <li>Prepare fuel system for storage:         <ul> <li>Drain all gasoline from the tank and carburetor. This is most easily accomplished by <i>running the pressure washer with the high pressure hose</i> until the engine stops from lack of fuel.</li> <li><u>OR</u></li> <li>Add fuel stabilizer to the gasoline (following manufacturer's instructions)</li> <li><u>Fuel stabilizer steps:</u> <ul></ul></li></ul></li></ol>
	<ul> <li>2. Lubricate cylinder and piston:</li> <li>a. Disconnect spark plug wire and remove spark plug</li> <li>b. Add one teaspoon oil through spark plug hole</li> <li>c. Place rag over spark plug hole and turn starter (or pull the recoil) a few times to lubricate the combustion chamber.</li> <li>d. Replace spark plug, but do not reconnect the spark plug wire.</li> </ul>

# Storage

Prepare pressure washer for storage	Prepare the pressure washer for storage.
washer for storage	1. Disconnect the battery, remove it from the battery compartment, and store it indoors.
	<ol> <li>Make sure the engine start switch is OFF and fuel valve is OFF.</li> <li>Disconnect the engine spark plug wire if you haven't already done so.</li> <li>Disconnect the high-pressure hose, garden hose, and spray gun.</li> </ol>
Move pressure washer to storage location	Let engine cool for 5 minutes before moving the pressure washer to its storage location.

### Burner Adjustment

#### **Oil Burner Adjustment**


(only needed if white exhaust smoke appears)

The oil burner is preset and performance tested at the factory (elevation 1100 feet). Different altitudes may require a one-time initial burner adjustment.

#### **A**CAUTION:

If white smoke appears from the burner exhaust vent during start-up or operation, discontinue use and readjust air bands.

Specific steps for burner correction are given below.

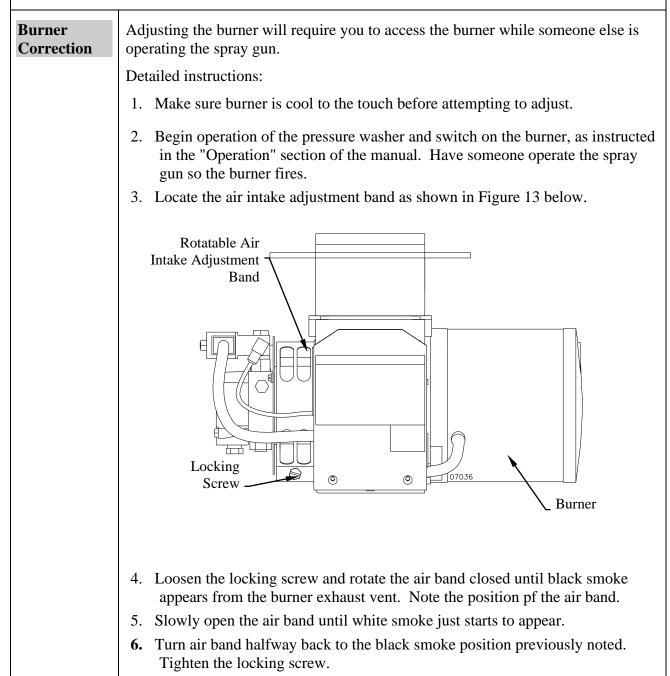

Inspect and maintain your pressure washer as specified below in order to keep it in safe and optimal working order. Follow all safety rules and recommended maintenance instructions.

### **A**WARNING

ALWAYS shut off water supply, bleed water pressure, turn off engine and disconnect the spark plug before cleaning, adjusting, or servicing the pressure washer. After servicing, make sure all guards and cover shields are replaced before using.

## Maintenance Schedule

Item	Frequency
Remove dust/debris accumulation	As needed
Inspect fuel system	Each use
Inspect spray system	Each use
Clean water filter	Each use
Recharge and maintain battery	As specified in Battery Manufacturer's instructions
Perform engine maintenance	As specified in Engine Owner's manual
Perform pump maintenance	<ul> <li>Change oil after first 40 hours, then every 3 months or 500 hours of use after that.</li> <li>Check mounting bolts regularly for proper torque.</li> </ul>
Maintain burner's fuel filter / water	Drain water as needed
separator	• Change filter after every 500 hours of use
Descale coil	Annually or more frequently as use and performance require (see instructions)
Inspect/clean/adjust electrodes	Annually
Check/tighten belts	Check belt tension after first 24 hours of use, then routinely with each oil change. Tighten or change belts as needed.

### See detailed instructions for each maintenance item below.

(Note: For end-of-the-season storage instructions, see the "Storage" section of this manual.)


Maintenance & Repair-Detailed Instructions		
Follow safety rules	<ul> <li>Read and follow these safety rules whenever you will be servicing the pressure washer:</li> <li>Turn off / relieve pressure first. Always turn off pressure washer and relieve system pressure before inspection or maintenance. Remove spark plug or spark plug wire to prevent accidental starting.</li> <li>Fuel valve off. Turn fuel shut-off valve to OFF position before transporting or servicing the pressure washer.</li> <li>Replace guards. Make sure all guards and cover shields are replaced after servicing the pressure washer.</li> </ul>	


	<ul> <li>Major repair. Major service, including the installation or replacement of parts, should be performed only by a qualified electrical service technician. Obtain factory approved parts from NorthStar Product Support at 1-800-270-0810.</li> <li>Replacement parts. If a part needs replacement, only use factory approved repair parts. Replacement parts that do not meet specifications may result in a safety hazard or poor operation of the pressure washer and will void the warranty.</li> </ul>
Keep pressure washer clean	Keep pressure washer clean.If dust or debris accumulates on the pressure washer, clean the pressurewasher with a damp cloth or soft bristle brush. Do not allow air intakes tobecome blocked. <u>CAUTION</u> : Do not spray pressure washer with a garden hose or pressure washer. Water may enter the pressure washer and cause damage.
Inspect fuel system(s)	<ul> <li>Inspect the fuel systems (of both engine and burner) and check for leaks before each use.</li> <li>Do not start pressure washer until all needed repairs have been completed.</li> <li>A WARNING: Fuel leak hazard</li> <li>Gasoline and burner fuel are highly explosive and fuel leaks can result in fire or explosions. You can be burned and seriously injured if the fuel system is not properly hooked up or there is a fuel leak when you start the engine.</li> <li>Inspect the entire fuel system, for both engine and burner. Look for: <ul> <li>signs of leaks or deterioration,</li> <li>chafed or spongy fuel hose,</li> <li>loose connections,</li> <li>loose or missing fuel hose clamps,</li> <li>damaged fuel tank, or</li> <li>defective gasoline shut-off valve.</li> </ul> </li> </ul>
Inspect spray system	<ul> <li>Inspect spray system for damage and leaks before each use.</li> <li>Do not start pressure washer until all needed repairs have been completed.</li> <li>WARNING: High pressure fluid injection hazard</li> <li>High pressure fluid discharge from leaks (even pin-sized) or ruptured components can pierce skin and inject fluid into the body.</li> <li>Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene, and possibly amputation.</li> <li>Never use a finger or skin to check for leaks.</li> <li>Never operate machine with damaged or missing hoses/parts.</li> <li>Never attempt to repair a high-pressure hose or component – Always replace it with a part that is rated at or above the pressure rating of this machine.</li> </ul>


<ul> <li>1) Check hoses, fittings, wand, trigger gun and connections for signs of wear, cracks, looseness, or leaks. Replace as required.</li> <li>2) Check and clean the nozzle orifice. <ul> <li>Good</li> <li>Good</li> <li>Water dripping or spraying,</li> <li>Bad</li> <li>or localized moisture</li> <li>Exposed wire mesh due</li> <li>Bad</li> </ul> </li> <li>Clean the inlet filter before each use.</li> <li>WARNING:</li> <li>When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.</li> <li>1) Unscrew inlet filter cap located on supply line to pump.</li> <li>2) Remove filter screen.</li> </ul>		
Clean inlet filterClean the inlet filter before each use. $M$ WARNING: When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.1) Unscrew inlet filter cap located on supply line to pump. 2) Remove filter screen.		
Water dripping or spraying, or localized moisture         Water dripping or spraying, or localized moisture         Exposed wire mesh due         Bad         To wear         Figure 15         Clean inlet filter         Clean the inlet filter before each use.         Mark WARNING:         When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.         1)       Unscrew inlet filter cap located on supply line to pump.         2)       Remove filter screen.		
Water dripping or spraying, or localized moisture         Water dripping or spraying, or localized moisture         Exposed wire mesh due         Bad         To wear         Figure 15         Clean inlet filter         Clean the inlet filter before each use.         Mark WARNING:         When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.         1)       Unscrew inlet filter cap located on supply line to pump.         2)       Remove filter screen.		
water dripping of spraying, or localized moisture         or localized moisture         Exposed wire mesh due to wear         Figure 15         Clean inlet filter         Clean the inlet filter before each use.         A WARNING:         When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.         1) Unscrew inlet filter cap located on supply line to pump.         2) Remove filter screen.		
water dripping of spraying, or localized moisture         or localized moisture         Exposed wire mesh due to wear         Figure 15         Clean inlet filter         Clean the inlet filter before each use.         A WARNING:         When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.         1) Unscrew inlet filter cap located on supply line to pump.         2) Remove filter screen.		
Exposed whe mesh due?         to wear         Figure 15         Clean inlet filter       Clean the inlet filter before each use.         Mark       WARNING:         When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.         1)       Unscrew inlet filter cap located on supply line to pump.         2)       Remove filter screen.		
Exposed whe mesh due?         to wear         Figure 15         Clean inlet filter       Clean the inlet filter before each use.         Mark       WARNING:         When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.         1)       Unscrew inlet filter cap located on supply line to pump.         2)       Remove filter screen.		
Clean inlet filter       Clean the inlet filter before each use.		
<ul> <li>WARNING: When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.</li> <li>Unscrew inlet filter cap located on supply line to pump.</li> <li>Remove filter screen.</li> </ul>		
<ul> <li>When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.</li> <li>1) Unscrew inlet filter cap located on supply line to pump.</li> <li>2) Remove filter screen.</li> </ul>	Clean the inlet filter before each use.	
2) Remove filter screen.	When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.	
<ul><li>3) Run water through screen to clean.</li><li>4) Reassemble.</li></ul>	<ol> <li>2) Remove filter screen.</li> <li>3) Run water through screen to clean.</li> </ol>	
Recharge and maintain batteryInspect, recharge, and maintain battery according to your battery manufacturer's instructions.		
Do not store with battery charger always connected. Batteries that are or charged can boil themselves dry and produce excessive amounts of hydrogen, an explosive gas.	<b>U I</b>	
Perform engine maintenancePerform engine maintenance as specified in the engine owner's many Engine maintenance items include: 1. Changing oil and oil filter 2. Air filter check/replacement 3. Spark plug cleaning and replacement 4. Fuel filter check/replacement 5. Inspecting and cleaning muffler (and spark arrestor if equipped)	<ol> <li>Changing oil and oil filter</li> <li>Air filter check/replacement</li> <li>Spark plug cleaning and replacement</li> <li>Fuel filter check/replacement</li> </ol>	


Change pump oil	<b>Change the pump oil</b> after the first 40 hours of use, and then after every 3 months or 500 hours of use after that.
	1. Open oil drain valve on pump.
	2. Drain pump oil into suitable container and dispose of responsibly.
	3. Close oil drain valve.
	4. Make sure unit is sitting level. Fill pump with 37 oz. of Universal Tractor Transmission Oil (UTTO) or Mobil1 15W50 synthetic oil to middle of sight glass (or at the indicator line on the dip stick if equipped).
	5. Replace oil fill cap.
	Sight glass
	Oil drain valve
	Figure 16
Maintain burner's fuel filter/water	Drain water from burner's filter bowl as needed, and replace filter after every 500 hours of use or as needed.
separator	1) After each use of the burner, visually check the filter bowl. If any water has accumulated, drain it via the water drain at the bottom of the bowl.
	<ol> <li>After every 500 hours of operation, inspect the fuel filter/water separator. Replace filter as needed.</li> </ol>
	Filter bowl Water drain
	Figure 17

Descale heating coil	Descale coil tubing annually or more frequently as needed.
	In hard water areas, scale can build up inside the heating coil tubing. Scale deposits will decrease the output pressure and temperature of heated spray, and may eventually clog water flow through the heating coil.
	Descale the coil tubing at least annually, and more frequently if you detect a decrease in output pressure or temperature.
	To descale the coil:
	<ol> <li>Mix a commercial coil cleaner in a 5-gallon bucket and elevate the bucket so it is higher than the unloader.</li> <li>Attach the high-pressure hose(s) to the high-pressure water outlet on the</li> </ol>
	<ul><li>machine. Do not hook up the spray gun.</li><li>3) Place the other end of the high-pressure hose(s) in the 5-gallon bucket.</li><li>4) Attach a short length of garden hose to the garden hose inlet on the</li></ul>
	<ul><li>pump.</li><li>5) Prime the pump by filling the hose with water, then placing the end of the hose in the bucket.</li></ul>
	6) Run the pressure washer in cold mode for 1 to 3 hours, recirculating the
	<ul><li>cleaning solution. CAUTION: Do not run the burner.</li><li>7) Dispose of the cleaning solution where it is not harmful to animals or the</li></ul>
	<ul><li>environment.</li><li>8) Flush with fresh water and clean the inlet strainer when finished.</li></ul>
	Inlet
	Figure 18

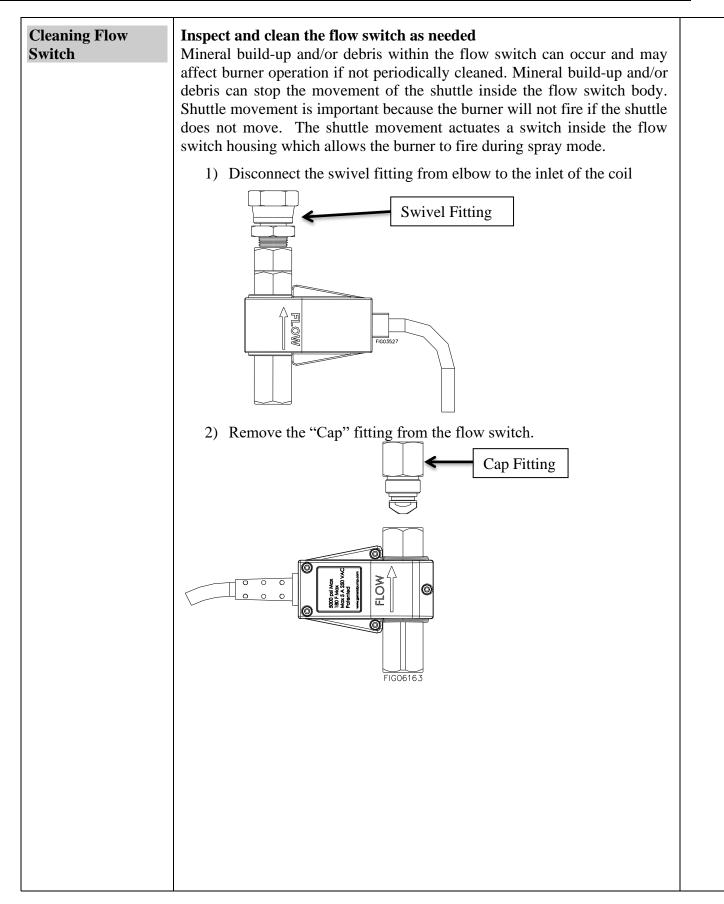

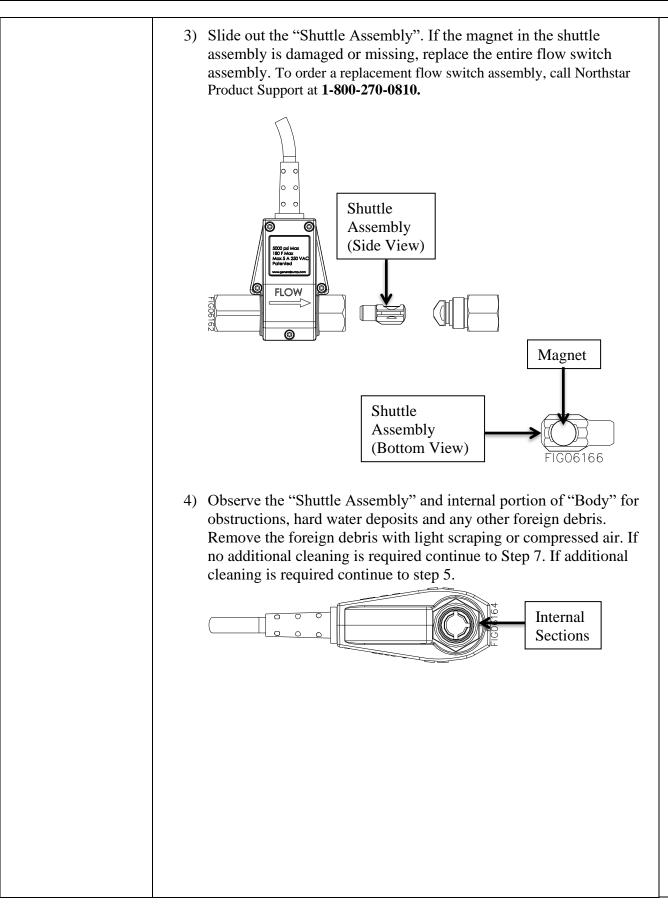

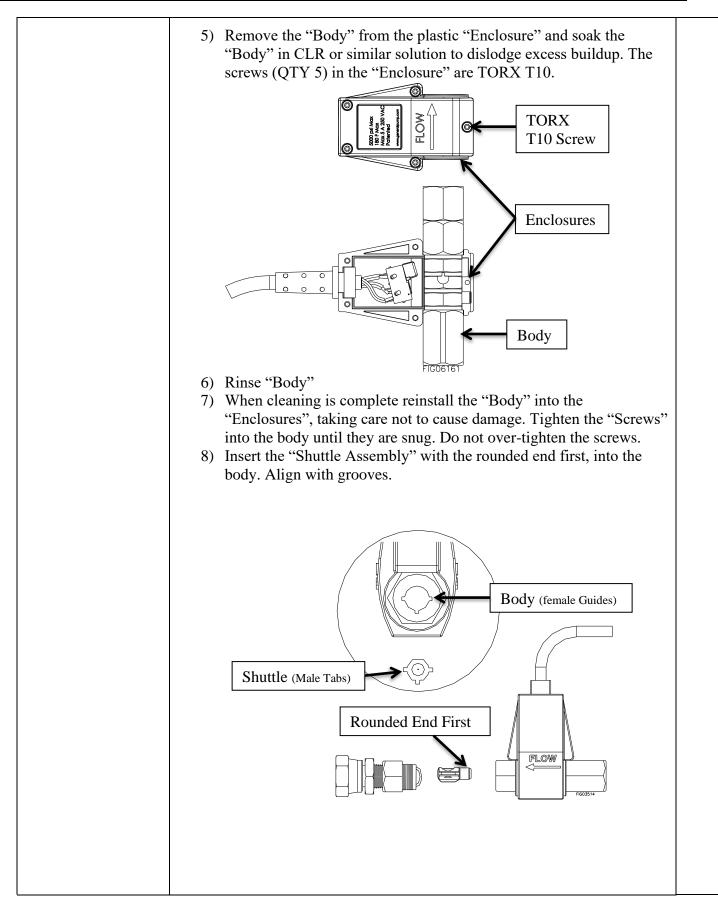

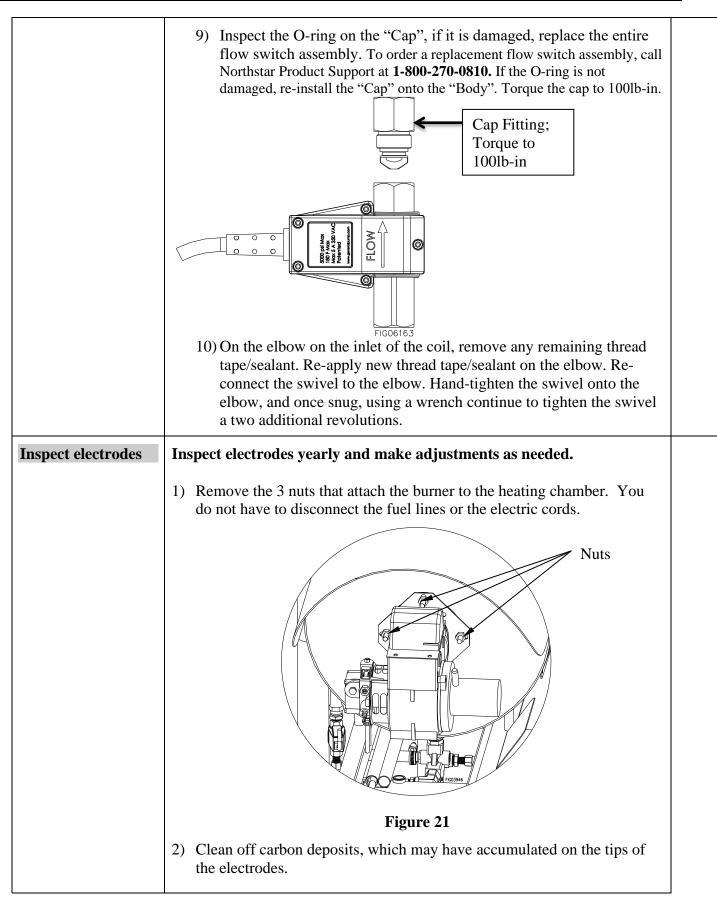

	3) Reset the spacing as shown below	w in Figure 22.	
	b) Reset the spacing to show the region 2.1.		
Drive belt maintenance	<ul> <li>Check drive belt tension after first routinely with each oil change. Tig Always tighten belts if slipping.</li> <li>WARNING: Belt slippage can cause static election in sparking. Fire ignition can rest Instructions:</li> <li>Make sure engine is off and sparl</li> <li>Remove belt guard. See "Parts B</li> </ul>	ghten or replace bel etricity build-up, whi ult. k plug wire is remo	lts as needed. ch may result oved.
	<ul> <li>location.</li> <li>3) Loosen pump mounting bolts (4)</li> <li>4) Inspect belts for wear/damage. R belts, always replace all three – d</li> <li>5) Tighten tension bolt to achieve th below. (Tightening the tension b engine, tightening all three belts and the below.)</li> </ul>	Replace as needed. Ion't mix old and ne recommended be olt pulls the pump	ew belts. elt tension specified
	Tension Specifications	New belt	Used Belt
	Static tension (per rib/strand):	87.0-93.2 lb.	74.5-80.8 lb.
	Rib/strand Deflections Distance:	0.2 in	0.2in
	Rib/Strand Deflection Force:	5.9-6.3 lb.	5.2-5.5 lb.
	Sonic Tension Meter:	387 to 414 N	332 to 359N

<ul> <li>Note: Some general rules of belt tension are:</li> <li>The ideal tension is the lowest tension without belt slippage</li> <li>Over tightening decreases belt and bearing life.</li> <li>Keep belts clean and free of foreign material that may cause slippage</li> <li>Do not apply belt dressing, which can cause damage and early belt failure.</li> </ul>
<ul><li>6) Ensure all three belts are the same tension.</li><li>7) Re-tighten pump mounting bolts. Torque to 29.4 ft-lbs.</li></ul>
<ul><li>8) Replace belt guard.</li></ul>
<b>WARNING:</b> Do not operate unless belt guard is in place to prevent access to rotating parts. Clothing or hair can become rapidly entangled in unguarded rotating parts, resulting in serious injury or death.

## NOTE TO COMMERCIAL USERS:

All mechanical equipment, no matter how well designed, will need maintenance and repairs. A Northstar pressure washer is no exception. At times, a Northstar pressure washer may become inoperable because repairs are required. Northstar Product Support will assist in these repairs as needed, but if an inoperable pressure washer creates a major expense to your business, then we strongly recommend the following:

- Have a staff person become familiar with the mechanical operation of the pressure washer and capable of making minor repairs and performing all preventative maintenance procedures.
- Keep a stock of recommended service parts for maintenance and minor repairs.

## **IMPORTANT**:

If a part needs replacement, only use parts that meet the manufacturer's part number specifications. Replacement parts that do not meet specifications may result in a safety hazard or poor operation of the pressure washer.

# Contact NorthStar Product Support at 1-800-270-0810 for any questions, problems, or parts orders.

# Troubleshooting

Engine Will Not Start		
Causes	Solutions	
Low Oil Shutdown	Fill engine with the adequate amount of oil.	
Cold Engine	Choke engine to start.	
No Fuel	Add gas to engine, make sure fuel shutoff valve is open.	
Dead Battery	Recharge/Replace battery.	
Spark plug wire not attached	Attach spark plug wire to spark plug.	


Pressure Washer Runs But Burner Doesn't Fire	
Causes	Solutions
Heat switch turned OFF	Turn heat switch ON.
Thermostat set too low or off	Set thermostat to desired temp.
Fuel tank empty	Fill fuel tank with kerosene, diesel, or fuel oil.
Defective Flow Switch	Clean flow switch. See Maintenance and Repair section for
	instructions.
Defective Thermostat	Call Product Support.
Defective Burner	Call Product Support.

Pressure Washer Runs But No Pressure	
Causes	Solutions
Partially clogged or damaged nozzle	Clean or replace nozzle.
Clogged water filter	Clean water filter.
Improper nozzle combinations	Use proper nozzle configurations as stated in manual
Low water flow	Check for kinked suction line


Smoke From Heat Exchanger	
Causes	Solutions
Air band not adjusted properly	Adjust the air band until the burner burns cleanly. See Installation
	Instructions
Poor quality fuel	Use kerosene for the cleanest burn.

V	Vater Not Heating Sufficiently
Causes	Solutions
Scale build-up in coil	See Coil Descaling under Maintenance Instructions.
Coil is full of soot	Call Product Support.

I	Poor Or No Detergent Supply
Causes	Solutions
Soap control knob set too low.	Adjust soap control knob.
Inadequate detergent supply	Refill detergent container. Make sure chemical strainer is fully
	submerged.
High pressure hose too long	Use less hose. Move machine closer to the work.
Chemical strainer or injector clogged	Clean the strainer and injector. Always start with a clean detergent
	container. Run clean water through the injector after each use.

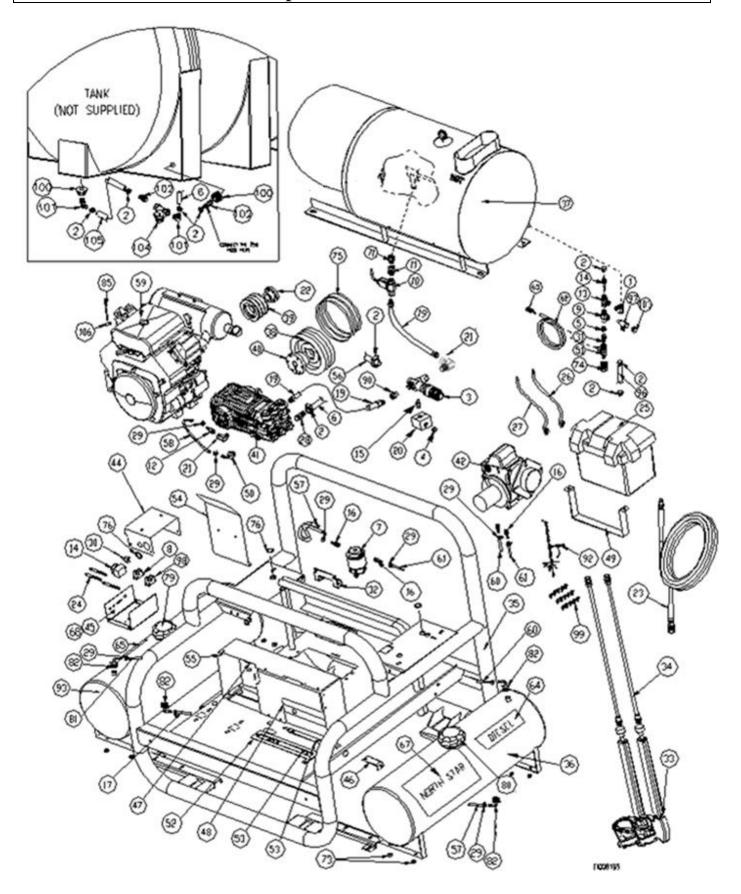

Ref	Part #	Description	Qty	Ref	Part #	Description	Qt
	5027	1/2" NPT elbow	1	50	779607	1/2" NPT x 1/4" HB 90°	1
	17141	3/4" hose clamp	11	51	779614	QC injector, 4gpm	1
	796502	Unloader Valve YVB40	1	52	779627	Pump guide	1
		Hex Head Plug, 3/8"	1	53	779628	Pump guide riser	
5	30048	1/2" NPT x 3/8" NPT reducer	1	54	806019	Heat shield	
6	805681	Hose, 3/4" ID PVC - 45"	1	55	779665	Belt guard bracket	
7	799864	Filter, Fuel/water separator	1	56	795910	Hose, 3/4" Discharge	
8		12V 80 amp relay	1	57	801490	Hose, 1/4" fuel line	6
9		1/2" Steel Street Tee	1	58	801490	Hose, 1/4" fuel line	1
0	797121	Flow switch 12.0 gpm 5000psi	1	59	779535	23.5hp Kohler engine	
1	38379	Swivel fitting, 6mp-8fps x ST	1	60	801490	Hose, 1/4" fuel line	4
2	38584	3/8" NPT easy start valve	1	61	801490	Hose, 1/4" fuel line	1
13		1/2" NPT tee	1	62	805560	Hose, 1/4" Braided Chemical –72"	
14		Thermostat	1	63	221222	Strainer, chemical hose	
15	43379	3/8 NPTM X 3/8 NPTM Union	1	64	779662	Decal, Diesel	
15		1/4" NPT x $1/4$ " hose barb	4	65	777666	Decal, Gasoline	
10 17		Hose, 1/4" fuel line	24"	67	777725	Decal, Gasonne Decal, NorthStar	⊢
17	777347	6MP-6FP-6FP tee forged		67	787126	Decal, NorthStar Decal, Control Panel	
10 19		0	1	71		8MP-8FP adapter	-
		18" 5400psi hose	2		779847		-
20	777409	Unloader block	1	73	2215	Bumper	-
21		3/8" NPT elbow	2	74	777914	Quick connect female	<u> </u>
22	777417	SH x 1-1/8" bushing (engine)	1	75	779545	Belt, BX44	1
23	38525	3/8 x 50' 4000psi hose	2	76	31985	Grommet	1
24	777646	Red LED, 12VDC	3	79	784769	Sealed fuel cap	<u> </u>
25	777647	Battery box	1	80	305206	Printed fuel cap	
26	777667	Battery cable, Red	1	81	801490	Hose, 1/4" fuel line	1
27		Battery cable, Black	1	82	783212	1/4" elbow, brass	
28		1/2" NPT x 3/4" HB Steel-AS	2	84	785767	1/4" x 3/16" hose mender	
29		1/4" hose clamp	12	85	803568	3/16" fuel line hose	,
30		Toggle switch	1	90	796160	1/2 NPT X 3/4 HB ELBOW	
31	777913	3/8" QC male nipple	3	92	803770	Wire harness	
32	778297	Filter mount bolted	1	93	791572	15 gal steel fuel tank, red	
33		Gun with lance	2	96	793836	3/4" Hose	
34	791279	28" lance	2	97	794626	Rupture Disc 8500, Kit	
35	803842	Skid frame	1	98	791375	12V DC Relay	
36	791571	15 gal steel fuel tank, yellow	1	99	803856	#3.5 Nozzle 5 Pack	
37	779752	Heat Exchanger, Horizontal	1	99	803860	#7.0 Nozzle 5 Pack	
38	779526	Sheave (pump)	1	100	5370	Bulkhead Fittings	
39	779527	Sheave (engine)	1	101	50NBR12	2 3/4" NPT x 3/4" Hose Barb Elbow	
40	779529	Bushing (pump)	1	102	5267	3/4" NPT x 3/4" Hose Barb	
41	779536	NorthStar pump TWS7040S	1	103	30511	1/2" NPT Plug	
12	803763	Burner 12V EH	1	104	797209	Strainer, 3/4" Y-Line	
44	782055	Control box top	1	104	805683	Hose, 3/4" ID PVC - 24"	⊢
45	787127	Control box top	1	105	803569	7/16" Spring action hose clamp	
46	779570	Tensioner	1	100	003309	1716 Spring action nose clamp	L
+0 47	779572	Belt guard	1				
+7 48	779573	Belt guard plate	1				
49	779581	Battery cradle	1				

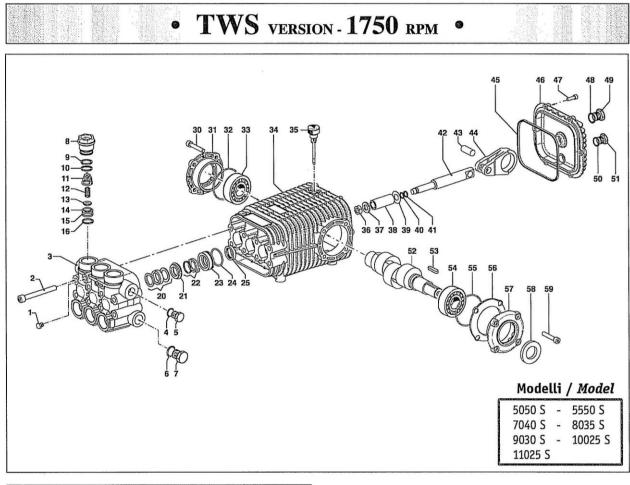

N°	Cod.	Kit	Descrizione	Description8030	Qty	Note
1	3202 0112		Тарро	Plug	1	G1/4
2	3609 0179		Vite	Screw	8	M10x100
24	1210 0547	B-D	Guamizione OR	O-Ring	3	Ø2x37
25	0019 0116	D	Anello Tenuta	Oil Seal	3	Ø22x32x7
30	3609 0157		Vite	Screw	4	M8x18
31	1009 0196		Flangia	Flange	1	
32	1210 0448	D	Guamizione OR	O-Ring	1	Ø2,0x70
33	0440 0028	調	Cuscinetto Rulli Conici	Roller Bearing	1	Ø30x62x25
34	0403 0155		Carter Pompa	Pump Crankcase	1	
35	3200 0075	124	Tappo Olio	Oil Dipstick	1	
43	3011 0026		Spinotto	Gudgeon Pin	3	Ø14x36
44	0205 0071		Biella	Connecting Rod	3	
45	1210 0369	D	Guamizione OR	O-Ring	1	Ø3,53x117,1
46	0402 0269	感谢	Coperchio Carter	Cover	1	國際局部運用;
47	3609 0032		Vite	Screw	6	M6x20
48	1210 0048	D	Guarnizione OR	O-Ring	1	Ø2,62x20,24
49	3201 0019		Тарро	Plug	1	61/2
50	1210 0441	D	Guamizione OR	0-Ring	1	Ø2x14
51	3200 0007		Тарро	Plug	1	3/8 GAS
53	1602 0055		Linguetta	Кеу	1	8x7x35
54	0440 0028		Cuscinetto Rulli Conici	Roller Bearing	1	Ø30x62x25
55	1210 0448	D	Guamizione OR	O-Ring	1	Ø2,0x70
56	0601 0304		Distanziale	Spacer	1	sp. 0,05
	0601 0305	12.32	Distanziale	Spacer	1	sp. 0,1
	0601 0306		Distanziale	Spacer	1	sp. 0,19
	0601 0307	1000	Distanziale	Spacer	1	sp. 0,25
57	1009 0195		Flangia	Flange	1	
58	0019 0032	D	Anello Tenuta	Oil Seal	1	Ø30x52x7
59	3609 0157		Vite	Screw	4	M8x18

## Modelli / Model

N°	Cod.	Kit	Descrizione	Description	Qty	Note
3	3218 0345		Testata Pompa	Pump Manifold	1	
4	2811 0084		Rondella	Washer	1	Ø16,7x22x1,5
5	3200 0007		Тарро	Plug	1	3/8 GAS
6	2811 0086	238	Rondella	Washer	1	Ø21,2x27x1,5
7	3202 0015		Тарро	Plug	1	G1/2
8	3202 0285	题的	Tappo Valv. Aspir./Mand.	Suction/Delivery Valve Plug	6	CORE STREET
9	0009 0289	A-D	Anello BK	Anti-Extr. Ring	6	
10	1210 0021	A-D	Guamizione OR	O-Ring	6	Ø2,62x15,54
11	1205 0025	A	Gabbia Valv. Aspir./Mand.	Suction/Delivery Valve Cage	6	
12	1802 0177	A	Molla Valv. Aspir./Mand.	Suct./Delivery Valve Spring	6	1. Starting
13	3604 0017	A	Valvola Aspiraz./Mandata	Suction/Delivery Valve	6	
14	3009 0144	A	Sede Valv. Aspir./Mand.	Suction/Delivery Valve Seat	6	为49683402.23年。
15	1210 0153	A-D	Guamizione OR	O-Ring	6	Ø2,62x15,08
16	0009 0299	A-D	Anello BK	Anti-Extr. Ring	6	ALCONTRACTOR
20	1241 0073	B	Guamizione Tenuta	Packing	3	Ø18
21	0009 0284		Anello Portaguarnizione	Packing Retainer	3	Ø18
22	1241 0074	B	Guarnizione Tenuta	Packing	3	Ø18
23	0009 0285	13.1	Anello Portaguarnizione	Packing Retainer	3	Ø18
36	0600 0054	C	Dado Speciale	Special Bolt	3	-
37	2811 0082	C	Rondella	Washer	3	Ø8,4x16x1,5
38	0202 0042	C	Bussola Ceramica	Ceramic Bushing	3	Ø18
39	2812 0042	C	Rondella	Washer	3	1.22317.0247-0
40	1210 0039	C-D	Guamizione OR	O-Ring	3	Ø1,78x7,66
41	0009 0170	C-D	Anello BK	Anti-Extr. Ring	3	1.40世纪的19世纪
42	2409 0109		Pistone Guida	Piston	3	
52	0001 0495	120	Albero Non Passante	NON-Throughshaft	1	5050 S
	0001 0498		Albero Non Passante	NON-Throughshaft	1	5550 S
	0001 0490	12/4	Albero Non Passante	NON-Throughshaft	1	7040 5

#### Modelli / Model

8035 S - 9030 S	1		laansa ah
	- 1	5	8035 5 - 90
Construction and the second second second	. 1	2	0033 3 30
	and	AVAALABAMINESS	PROFESSION
			774-11-17-1

Versione S (Albero Maschio 24 mm) S Version (Hollow Shaft 24 mm)

N°	Cod.	Kit	Descrizione	Description	Qty	Note
3	3218 0346		Testata Pompa	Pump Manifold	1	
4	2811 0086		Rondella	Washer	1	Mary South St.
5	3202 0015		Тарро	Plug	1	1/2"
6	2811 0079		Rondella	Washer	.1	Ø27,7x32,5x1,5
7	3202 0115		Тарро	Plug	1	3/4"
8	3202 0286	1,111,1	Tappo Valv, Aspir./Mand.	Suction/Delivery Valve Plug	6	2. 18. 11 A.
9	0009 0290	A-D	Anello BK	Anti-Extr. Ring	6	
10	1210 0048	A-D	Guarnizione OR	O-Ring	6	Ø2,62x20,54
11	1205 0038	A	Gabbia Valv. Aspir./Mand.	Suction/Delivery Valve Cage	6	
12	1802 0244	A	Molla Valv. Aspir./Mand.	Suct/Delivery Valve Spring	6	
13	3604 0032	A	Valvola Aspiraz./Mandata	Suction/Delivery Valve	6	
14	3009 0145	A	Sede Valv. Aspir./Mand.	Suction/Delivery Valve Seat	6	_12 C_12 A
15	1210 0048	A-D	Guarnizione OR	O-Ring	6	Ø2,62x20,54
20	1241 0075	B	Guamizione Tenuta	Packing	3	Ø22
21	0009 0282		Anello Portaguarnizione	Packing Retainer	3	Ø22
22	1241 0076	B	Guarnizione Tenuta	Packing	3	Ø22
23	0009 0283		Anello Portaguarnizione	Packing Retainer	3	Ø22
36	0600 0062	C	Dado Speciale	Special Bolt	3	The state of the second
37	2811 0123	C	Rondella	Washer	3	Ø12x20x1,5
38	0202 0043	C	Bussola Ceramica	Ceramic Bushing	3	Ø22
39	2812 0083	C	Rondella	Washer	3	
40	1210 0170	C-D	Guarnizione OR	O-Ring	3	Ø1,78x10,82
41	0009 0225	C-D	Anello BK	Anti-Extr. Ring	3	
42	2409 0111		Pistone Guida	Piston	3	The states as
52	0001 0498		Albero Non Passante	NON-Throughshaft	1	8035 S
	0001 0497	12	Albero Non Passante	NON-Throughshaft	1	9030 S

#### Modelli / Model

		-	420		~
10	025	2 -	130	20	2
3					

Versione S (Albero Maschio 24 mm) S Version (Hollow Shaft 24 mm)

N°	Cod.	Kit	Descrizione	Description	Qty	Note
3	3218 0343		Testata Pompa	Pump Manifold	1	
4	2811 0086		Rondella	Washer	1	in the second second
5	3202 0015		Тарро	Plug	1	1/2"
6	2811 0079		Rondella	Washer	1	Ø27,7x32,5x1,5
7	3202 0115		Тарро	Plug	1	3/4"
8	3202 0286		Tappo Valv. Aspir./Mand.	Suction/Delivery Valve Plug	6	·····
9	0009 0290	A-D	Anello BK	Anti-Extr. Ring	6	
10	1210 0048	A-D	Guarnizione OR	O-Ring	6	Ø2,62x20,54
11	1205 0038	A	Gabbia Valv. Aspir./Mand.	Suction/Delivery Valve Cage	6	
12	1802 0244	A	Molla Valv. Aspir./Mand.	Suct./Delivery Valve Spring	6	1 - 2 - 2 - 1 - F
13	3604 0032	A	Valvola Aspiraz./Mandata	Suction/Delivery Valve	6	
14	3009 0145	A	Sede Valv. Aspir./Mand.	Suction/Delivery Valve Seat	6	Nation 411
15	1210 0048	A-D	Guarnizione OR	O-Ring	6	Ø2,62x20,54
20	1241 0077	B	Guarnizione Tenuta	Packing	3	Ø25
21	0009 0286		Anello Portaguarnizione	Packing Retainer	3	Ø25
22	1241 0078	B	Guarnizione Tenuta	Packing	3	Ø25
23	0009 0287		Anello Portaguarnizione	Packing Retainer	3	Ø25
36	0600 0062	C	Dado Speciale	Special Bolt	3	197 J. (1975)
37	2811 0123	C	Rondella	Washer	3	Ø12x20x1,5
38	0202 0044	C	Bussola Ceramica	Ceramic Bushing	3	Ø25
39	2812 0083	0	Rondella	Washer	3	
40	1210 0170	C-D	Guarnizione OR	O-Ring	3	Ø1,78x10,82
41	0009 0225	C-D	Anello BK	Anti-Extr. Ring	3	
42	2409 0111		Pistone Guida	Piston	3	1.100
52	0001 0498		Albero Non Passante	NON-Throughshaft	1	10025 5
	0001 0490		Albero Non Passante	NON-Throughshaft	1	13020 S

#### Kit Valvola Aspirazione/Mandata 4000 psi (5025 0021) Complete Valve Kit (5025 0020)

Kit A	00
	à
	)0000

<u></u>	5025 002	1
N°	Cod.	Qty
9	0009 0289	6
10	1210 0021	6
11	1205 0025	6
12	1802 0177	6
13	3604 0017	6
14	3009 0144	6
15	1210 0153	6
16	0009 0299	6

	5025 002	-
N°	Cod.	Qty
9	0009 0290	6
10	1210 0048	6
11	1205 0038	6
12	1802 0244	6
13	3604 0032	6
14	3009 0145	6
15	1210 0048	6

Kit Guarnizioni Pistoni Piston Seal Kit		Ø2		(5	019 06 019 06 019 06	46)
		5019 064	5		5019 064	6
Kit B	N°	Cod.	Qty	Nº	Cod.	Qty
	20	1241 0073	3	20	1241 0075	3
	22	1241 0074	3	22	1241 0076	3
MOD Va	24	1210 0547	3	24	1210 0547	3
<b>Ma</b>		5019 064	7			
	N°	Cod.	Qty			

Kit Pistone Piston Kit			2 mm	(2	409 01	14)
		2409 011	6	2	409 011	4
Kit C	N°	Cod.	Qty	Nº	Cod.	Qty
000	36	0600 0054	3	36	0600 0062	3
	37	2811 0082	3	37	2811 0123	3
(M)()	38	0202 0042	3	38	0202 0043	3
SP-	39	2812 0042	3	39	2812 0083	3
	40	1210 0039	3	40	1210 0170	3
	41	0009 0170	3	41	0009 0225	3
	3.9	2409 011	5			
	N°	Cod.	Qty			
	36	0600 0062	3			
	37	2811 0123	3			
	38	0202 0044	3			
	39	2812 0083	3			
	40	1210 0170	3			
	41	0009 0225	3			


Kit Guarnizioni Pompa 4	4000	psi	(5019	0649)	)
Seal Kit	3600	psi	(5019	0644)	150

10 15

20 1241 0077

22 1241 0078

24 1210 0547

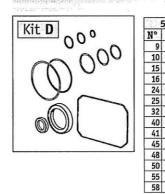


5019 064	9	5019 0644			
Cod.	Qty	N°	Cod.	Qty	
0009 0289	6	9	0009 0290	6	
1210 0021	6	10	1210 0048	6	
1210 0153	6	15	1210 0048	6	
0009 0299	6	24	1210 0547	3	
1210 0547	3	25	0019 0116	3	
0019 0116	3	32	1210 0448	1	
1210 0448	1	40	1210 0170	3	
1210 0039	3	41	0009 0225	3	
0009 0170	3	45	1210 0369	1	
1210 0369	1	48	1210 0048	1	
1210 0048	1	50	1210 0441	1	
1210 0441	1	55	1210 0448	1	
1210 0448	1	58	0019 0032	1	
0019 0032	1				

3


3

3

# Burner Exploded View – Rev BG.3

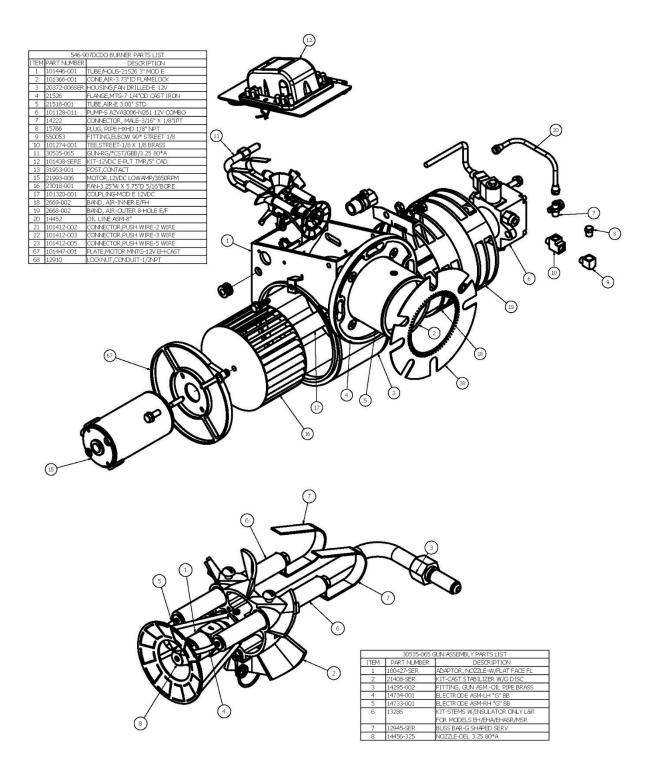

# Wiring Diagram – Rev BG.3

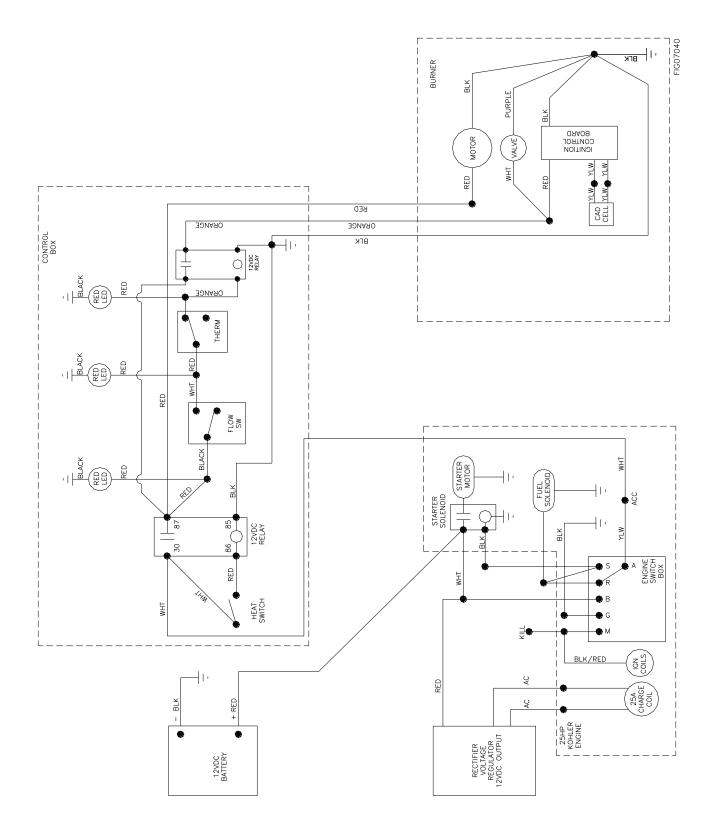

This section provides a summary of the various safety procedures and measures that have been presented throughout the manual. Keep this summary handy and refer to it to refresh your memory about how to safely use your pressure washer.

## WARNING

**Carefully read and understand the following safety information** before using the pressure washer. Improper use or maintenance of the pressure washer can result in *serious injury or death* to the operator or bystanders from:

 Carbon monoxide poisoning
 Skin/eye injury from high pressure spray
 Fire/explosion
 Burns
 Electric shock
 Flying objects/debris

## General

- **Read all instructions.** Read and understand this Owner's Manual and the engine Owner's Manual completely before attempting to set-up and use the pressure washer. Serious injury or death can result if safety and other instructions are not followed.
- **Instruct all operators**. The pressure washer's owner must instruct all operators and potential renters in safe pressure washer set-up and operation. Do not allow anyone to operate the pressure washer who has not read the Owner's Manual and been instructed on its safe use. Owner's Manuals are available from North Star at 1-800-270-0810.
- Adult control only. Only trained adults should set up and operate the pressure washer. Do not let children operate. Pressure washers can generate forces greater than children can control and require judgment beyond what can be expected of children.
- Under the influence. Never operate, or let anyone else operate, the pressure washer while fatigued or under the influence of alcohol, drugs, or medication.
- Understand intended use. Carefully read about and understand the intended use of this pressure washer. Do not use for other purposes, as unforeseen hazards or equipment damage may result.

## **Prohibition Against Modifications**

Never modify or alter the pressure washer in any way, or deactivate any safety device. Modifications can create serious safety hazards and will also void the warranty.

- **Fuel/exhaust system**. Never add to or modify the exhaust system, fuel tank, or fuel lines. Carbon monoxide poisoning, fuel leaks, fire or explosion could result.
- Unloader valve. Do not attempt to alter the unloader valve's maximum pressure. Excess pressure could cause serious injury from escaping high-pressure fluids and/or pump damage. Any alteration other than turning the adjustment knob will void your warranty.
- Guards. Do not operate pressure washer unless all guards and cover shields are in place.

## Safety – Installation & Set-up

### **Battery Safety**

Batteries are hazardous because they contain caustic acid, can emit explosive gases, and can cause electric shock. *Caution must be exercised when making connections to a battery to avoid shock and contact with the acid, and to prevent any sparking that could lead to an explosion*. Follow these and other safety rules carefully when connecting battery to pressure washer:

- **Eye/skin protection.** Always wear eye protection and protective clothing when connecting or disconnecting battery.
- Sparks/Smoking. Never smoke or work near sparks or other sources of ignition.
- Electric shock. Never touch both battery terminals at the same time with your hand or any non-insulated tools.
- **Connection/disconnection sequence.** ALWAYS connect and disconnect cables to the correct battery terminals in the proper sequence:
  - When CONNECTING the battery, connect the RED cable to the POSITIVE terminal FIRST.

- When DISCONNECTING the battery, disconnect the BLACK cable from the NEGATIVE terminal FIRST
- Acid/skin contact. If battery acid contacts skin or clothing, flush immediately with water and neutralize with baking soda.

### **Installation / Initial Set-up**

- Level, heat-resistant surface. Situate pressure washer on a firm, level, and heat-resistant surface with good drainage. Ensure it sits level and will not slide or shift during operation. Block wheels to prevent movement.
- **Prevent carbon monoxide poisoning Use outside only!** Exhaust fumes from both the engine and the burner contain carbon monoxide (CO), a poisonous gas you cannot see, smell, or taste. The CO generated by the power washer can rapidly accumulate, even in areas that appear to be well ventilated, resulting in dangerous and fatal concentrations within minutes. To prevent dangerous CO build-up:
  - ONLY use pressure washer outdoors and far away from open windows, doors, and building or vehicle vents.
  - NEVER run pressure washer in an enclosed or partially enclosed location such as a building, garage, shed, or vehicle. Running a fan or opening windows will not provide adequate ventilation to prevent dangerous CO build-up.
- Adequate ventilation. The pressure washer needs adequate, unobstructed flow of air to allow for proper combustion and cooling. Situate so there is adequate clearance around pressure washer to allow for airflow at least 7' from any non-combustible wall or obstruction. Never place any objects against or on top of pressure washer.
- **CO alarms**. Ensure that working, battery-operated or battery back-up carbon monoxide alarms are used in any dwelling/structure that is in close proximity to the running pressure washer.
- Hot exhaust fires. Exhausts from engine and burner can be extremely hot and cause fire. Position sprayer so engine and burner exhausts are at least 7' away from combustible objects during operation.
- **Spark arrestor usage**. Equip engine with a spark arrestor if pressure washer will be used near any ignitable forest, brush, or grassy land. See the "Specifications" section of this manual to determine if your pressure washer is already equipped. In such conditions, make sure you comply with applicable local, state and federal codes.

### **Fuel Safety**

Gasoline is highly flammable and explosive; and burner fuels are combustible at warm temperatures. You can be burned or seriously injured when handling fuel. Using extreme care when handling fuel, including these preventative measures:

- **Fuel outdoors**. Fill fuel tank outdoors never indoors. Fuel vapors can ignite if they collect inside an enclosure. Explosion can result.
- Use approved container. Never pump fuel directly into fuel tank at gas station. Static charge can build and ignite fuel. Use an UL approved fuel container to transfer fuel to the engine.
- **Running / hot engine**. A hot engine or burner is hot enough to ignite fuel. Never add fuel or remove fuel cap if engine or burner are running or still hot. Allow engine to cool at least two minutes before adding fuel.
- Heat / flames / sparks. Stay away from sources of heat, flame, or sparks while adding fuel.
- **Don't overfill**. DO NOT overfill the fuel tank. Allow at least 1/2" of empty space below the fill neck to allow for fuel expansion.
- **Replace cap**. Replace fuel cap securely before starting engine.
- **Spills**. Clean up fuel spills immediately. Move pressure washer away from spilled fuel on the ground. Wipe fuel off engine and wait 5 minutes for excess fuel to evaporate before starting engine. Fuel soaked rags should be disposed of properly.
- On skin / clothes. If fuel is spilled on your skin or clothes, change clothes and wash skin immediately.
- **Inspect fuel system**. Check fuel tanks and fuel system on a regular basis. Look for signs of leaks, deterioration, chafed or spongy fuel hose, loose or missing fuel hose clamps, damaged fuel tank, or a defective fuel shut-off valve. Do not start pressure washer until needed repairs have been completed.
- Fuel storage. Store fuel in a cool, dry place in an UL-approved, tightly sealed container.

## Safety – Operation

### **Pre-start**

- **Review safety rules**. Before each use of this pressure washer, review the "Rules for Safe Operation." Failure to follow these rules may result in serious injury or death.
- Know how to stop. Be thoroughly familiar with proper use of the equipment and all controls and connections. Know how to stop the pressure washer and relieve system pressure quickly if needed.
- **Danger: High-pressure fluid injection hazard**. High-pressure fluid spray or discharge from leaks (even pinsized) or ruptured components can pierce the skin and inject fluid into the body. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene and possibly amputation.
- Check/maintain machine before each use. Check hoses & fittings for damage and leaks before use. Ensure all components are properly connected. Follow all maintenance instructions specified in pressure washer and engine manuals.
  - Never operate machine with damaged or missing hoses/parts. Never attempt to repair a high-pressure hose or component. Always replace it with a part that is rated at or above the pressure rating of this machine.
  - Never run the machine without sufficient lubrication or sufficient water to cool the pump.Never operate unless all safety guards are in place.
- **Position safely**. Place sprayer on firm, level ground to prevent accidental falls and equipment tip-over.
- Not in presence of combustibles. Do not use the pressure washer in the presence of flammable vapors, dust, gases, or other potentially combustible materials. Operate only where open flame or torch is permitted
- Use backflow preventer. The use of a back flow preventer (Part #222815 call 1-800-270-0810 to order) on the water supply hose is recommended and may be required by local code.
- Clear work area. Clear work area of all bystanders. Keep children and pets away.
- Wear protective gear. High-pressure spray can cause eye/skin injury, hot water can burn, and flying objects/debris can cause injury. Serious injection injury can result if high-pressure spray penetrates the skin. Operators should wear waterproof, thermally insulated gloves, safety glasses with side and top protection, face protection, and protective clothing when operating the machine. If spraying pressure washer specific cleaning chemicals, wear a respirator or mask to avoid inhalation of vapors if directed on the chemical label.
- Wear non-slip footwear. Use of pressure washer can create puddles and slippery surfaces. Wear footwear capable of maintaining a good grip on wet surfaces.
- Check sprayer nozzle. Sprayer nozzle can become a projectile and cause serious personal injury or property damage if not properly connected to the spray gun. Check to ensure the nozzle has been properly attached to the spray gun before using the pressure washer.

### **During use**

- **Safety latch locked before starting engine.** Always engage the safety latch on the spray gun trigger before starting the engine.
- **Incoming water supply on.** Do not run the pump without the water supply connected and turned on. Operating the pressure washer without an incoming flow of water will damage the pump.
- Wait before re-lighting burner. NEVER attempt to immediately run or re-light the burner if it doesn't ignite the first time. Unburned oil or gas may have accumulated, causing potential explosion or fire hazard.
- Use two hands. Pressure washer spray gun kicks back when triggered. Firmly grasp with two hands.
- Stay alert. Watch what you are doing at all times.
- **Prevent slips / loss of balance**. High-pressure spray could cause you to lose balance from kickback forces, and wet surfaces can be slippery.
  - Keep good footing and balance at all times.
  - Do not overreach.
  - Do not stand on unstable support when spraying.
  - Use extreme caution when spraying from a ladder or scaffolding, ensure it is firmly anchored from sway or tip-over. Use extreme caution to avoid falling as spray gun kick can propel you off the ladder or scaffolding.
  - Be aware of puddles and slippery surfaces. Ensure there is adequate drainage to prevent pooling of water.
- Keep spray away from people. Never direct discharge stream at or near any person. Do not allow any part of the body to come in contact with the fluid stream. High-pressure spray will cause serious skin, eye, or falling injuries, and hot water can burn. Injection injury will occur if high-pressure spray pierces the skin, injecting

liquid under the skin. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene and possibly amputation.

- **Dual gun use.** During dual gun use, stay aware of the other operator's location at all times and keep spray directed away from them.
- **Prevent surface damage & flying debris** Surfaces being sprayed must be strong enough to withstand highpressure spray, or damage may result. In addition, high-pressure spray will dislodge unsecured objects as well as surface chips and debris, resulting in hazardous flying objects that can cause personal injury or property damage. Do not spray brittle surfaces or breakable, fragile, or unsecured objects such as:
  - o stucco or laminar flagstone
  - some painted surfaces
  - windows or glass doors (because they may break)
  - o light fixtures, flowerbeds, mailboxes
  - unsecured, lightweight objects
- **Do not lock spray gun trigger in ON position**. To reduce risk of injury, do not attempt to secure the spray gun open by blocking or tying the spray gun in the open position.
- Keep spray away from electrical wiring. Spray contact with electrical wiring will likely result in severe electrical shock or electrocution.
- Use only approved cleaning chemicals. Only chemicals specifically designed for use in pressure washers may be used. Never spray acids, corrosives, or abrasive or flammable liquids. Breathing hazards, surface burns/corrosion, or fire/explosion could result.
- Follow cleaning chemical manufacturer's instructions. Follow the chemical manufacturer's label instructions when handling or spraying chemicals. Understand all safety hazards and first aid for all chemicals being used. Wear protective gear as directed. Always wear protective gloves when handling and cleaning with chemicals. When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may have been recommended by the supplier of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.
- Do not exceed pressure and or temperature limits. Do NOT operate this pump with components (such as hose, connections, and spray gun) rated for lower pressure and or temperature limits than the machine's maximum rated pressure and temperature, or component could rupture and cause serious personal injury from escaping high pressure fluids. Do not set the pressure safety device above the rated pressure. If the high-pressure safety device ever discharges water, turn the engine off and do not use the machine. The device will no longer function properly. See a dealer or call Product Support at 1-800-270-0810.
- Never pull by hose. Do not move this machine by pulling on the hose. Hose or connections could fail and result in catastrophic high-pressure release of fluid as well as hose whipping.
- Avoid sharp objects. Keep hose away from sharp objects. Bursting hoses may cause injury.
- No load bearing. Do not use the pump to support other items of equipment that impose unacceptable loads on the pump. Do not attempt to use this machine as a prop.
- Hot exhaust/parts. Stay clear of engine and burner exhausts. Never touch hot engine muffler, burner/heating coil, or other hot surfaces. All are very hot and will burn you.
- Hot spray gun metal when using burner. Never touch the metal screw or any metal parts of the spray gun when the heater is being used the metal gets very hot and will burn you.
- **Smoking/sparks**. Never smoke near the running engine, and never operate near sources of sparks or flames as flammable fuel vapors are in the vicinity of the pressure washer.
- Lock trigger safety latch when not spraying. Spray gun is equipped with a built-in trigger safety latch to guard against accidental trigger release. Rotate safety latch to the locked position when not spraying.
- **Relieve water pressure.** Always stop the product and relieve system pressure before leaving the sprayer unattended, or when disconnecting hoses, removing nozzles, or servicing the pump.
- Refueling. Never add gasoline to the engine or fuel to the burner unless unit is off and has cooled.
- **Do not direct spray at this machine.** Do not attempt to clean this machine with its own spray. Engine damage will result. Cleaning should be done with a damp sponge with the engine OFF.
- Seek medical aid for suspected carbon monoxide poisoning. The running engine gives off carbon monoxide, a poisonous gas that can kill you. If you start to feel sick, dizzy, or weak while using the pressure washer, shut off the engine and get to fresh air RIGHT AWAY. See a doctor. You may have carbon monoxide poisoning.
- Seek medical aid for suspected injection injury. If injured by high-pressure fluid, no matter how small the wound is, see a doctor at once. A typical injection injury may be a small puncture wound that does not look

serious. However, severe infection or reaction can result if proper medical treatment is not administered immediately by a doctor who is familiar with injection injuries.

• Other exhaust dangers. This product contains or emits chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Avoid inhalation of exhaust.

### After use

- **Cool engine before storing.** Let engine cool for at least five minutes before storing. A hot engine is a fire hazard.
- **Prevent accidental starting.** When pressure washer is not in use, remove spark plug or spark plug wire in order to ensure that pressure washer cannot be started in a storage location or by untrained persons.
- **Storage location.** Store the pressure washer in a dry location away from sources of heat, open flames, sparks or pilot lights such as water heaters, space heaters, furnaces, clothes dryers, or other gas appliances EVEN IF the pressure washer's gas tank is empty, residual vapors or fuel could ignite.
- **Periodic maintenance.** Perform periodic maintenance as directed in this manual to keep the pressure washer in safe working condition.

### Safety - Inspection/Maintenance

Inspect and maintain your pressure washer on a regular basis and repair as needed to keep it in safe working condition:

- **Turn off / relieve pressure first.** Turn off pressure washer and relieve system pressure before inspection or maintenance. Remove spark plug or spark plug wire before working on the engine or pressure washer to prevent accidental starting.
- Fuel valve off. Turn fuel shut-off valve to OFF position before transporting or servicing the pressure washer.
- Follow maintenance schedule. Follow all maintenance instructions in this power washer manual and the engine manual.
- Replace guards / shields. Make sure all guards and shields are replaced after servicing the pressure washer.
- **Replacement parts.** If a part needs replacement, only use factory approved repair parts. Replacement parts that do not meet specifications may result in a safety hazard or poor operation of the pressure washer and will void the warranty.

## Limited Warranty

Dear Valued Customer:

The NorthStar Product you just purchased is built with the finest material and craftsmanship. Use this product properly and enjoy the benefits from its high performance. By purchasing a NorthStar product, you show a desire for quality and durability. Like all mechanical equipment this unit requires a due amount of care. Treat this unit like the high quality piece of machinery it is. Neglect and improper handling may impair its performance. Please thoroughly read the instructions and understand the operation before using your product. Always contact NorthStar Product Support at 1-800-270-0810 prior to having any service or warranty work performed, as some services performed by parties other than NorthStar approved service centers may void this warranty. This warranty is in lieu of any other warranty expressed or implied and NorthStar assumes no other responsibility or liability outside that expressed within this warranty.

### **Limited Warranty**

NorthStar shall warranty any piece of equipment manufactured, or parts of equipment manufactured, to be free from defects in material or workmanship for a period of:

NorthStar Warrant	y	
Item #	Consumer Warranty Period	<b>Commercial Warranty Period</b>
157598	2 years from date of purchase by user	2 years from date of purchase by user

<b>Engine Warranty</b>		
Item #	<b>Consumer Warranty Period</b>	<b>Commercial Warranty Period</b>
157598	2 years from date of purchase by user	2 years from date of purchase by user

"Consumer use" means personal residential household use by a consumer. "Commercial use" means all other uses, including use for commercial, income producing or rental purposes or when purchased by a business.

This warranty applies to the original purchaser of the equipment (verification of purchase, in the form of a receipt, is the responsibility of the buyer), is non-transferable, and covers parts and labor. Parts will be replaced or repaired at no charge, except when the equipment has failed due to lack of proper maintenance. If a part is no longer available, the part may be replaced with a similar part of equal function. Any misuse, abuse, alteration or improper installation or operations will void warranty. Determining whether a part is to be replaced or repaired is the sole decision of NorthStar. NorthStar will not provide for replacement of complete products due to defective parts. Any costs incurred due to replacement or repair of items outside of a NorthStar approved facility is the responsibility of the buyer and not covered under warranty. Transportation costs to and from service center is the responsibility of the customer.

In addition to the normal warranty, NorthStar shall warrant any normal wear item from defects in material or workmanship for a period of 90 days from the date of purchase by user. Normal wear items include, but are not limited to, nozzles, quick connect fittings, valves, high and low pressure water seals/packing, high and low pressure hoses, O-rings, unloader valves and filter elements.

This warranty specifically excludes the following; failure of parts due to damage caused by accident, fire, flood, windstorm, acts of God, applications not approved by NorthStar in writing, corrosion caused by chemicals, use of replacement parts which do not conform to manufacturer's specifications, damage related to the use of biodiesel fuel, damage to accessory parts such as starting batteries, damage related to rodent and/or insect infestation and damage caused by vandalism. Additional exclusions: loss of running time, inconvenience, loss of income, or loss of use, including any implied warranty of merchantability of fitness for a specific use. Also, Outdoor Power Equipment needs periodic parts and service to perform well, and this warranty does not cover instances when normal use has exhausted the life of a component or the engine.

This warranty does not cover any personal injury or damage to surrounding property caused by failure of any part. Repair or replacement of parts does not extend the warranty period.

Normal burner maintenance such as cleaning and adjusting electrodes, descaling the coil, desooting the coil, air adjustments, fuel system cleaning and obstruction due to build up is not covered by this NorthStar warranty.

The engine warranty is covered under the terms and conditions as outlined by the engine manufactures warranty contained herein and is the sole responsibility of the engine manufacture. Normal engine maintenance such as spark plugs, air filters, adjustments, fuel system cleaning and obstruction due to build up is not covered by this NorthStar warranty.

Please fill in the following information and have it on hand when you call in on a warranty claim.

Customer Number:
Date of Purchase:
NorthStar Serial Number:
Item Number:

This page is intentionally left blank.

**AWARNING**: This product can expose you to chemicals including gasoline engine exhaust, which is known to the State of California to cause cancer, and carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm.

For more information go to <u>www.P65Warnings.ca.gov</u>.



Manufactured by Northern Tool + Equipment Co., Inc. Burnsville, MN 55306 NorthernTool.com