

M990994D

ITEM NUMBER: 990994
SERIAL NUMBER:

Owner's Manual

Pressure Washer: Machine that cleans dirty surfaces with high pressure water. Instructions for Installation/Set-up, Operation, Maintenance, & Storage

This pressure washer produces cold-water high-pressure spray. The pressure pump for this equipment is powered by a gasoline internal combustion engine.

▲ WARNING

SPECIAL HAZARDS

- **CO Poisoning:** Exhaust from engine contains carbon monoxide, a poisonous gas that can cause carbon monoxide poisoning and possible death if inhaled. ONLY run pressure washer OUTDOORS and at least 20 feet from the home, away from windows, vents and air intakes, to allow proper ventilation. If you start to feel sick, dizzy, or weak while using the pressure washer, shut off the engine and get to fresh air RIGHT AWAY.
- **Injection Injury**: High-pressure spray can pierce skin and underlying tissues, leading to serious injury and possible amputation. Such an injection injury can result in blood poisoning and/or severe tissue damage.
- Flying Debris: High-pressure spray can cause flying debris and possible surface damage.
- Electric Shock: Operating equipment in wet conditions or near water can cause electric shock.
- Slips/Falls: Spray discharge can cause puddles and slippery surfaces. Spray-gun kickback can cause operator loss of balance and falls.
- **Fire/Explosion:** Engine sparking can ignite fuel or other flammable liquids or vapors in the vicinity. Hot exhaust from engine can ignite combustible materials.
- **Burns**: Pressure washer pump and engine are hot surfaces that can cause burn injuries. Detailed safety information about these hazards appears throughout this manual.

Equipment Protection Quick Facts

Inspect Upon Delivery: FIRST! Inspect for missing or damaged components. See "*Initial Set-Up*" section for where to report missing or damaged parts.

Add Engine Oil: Engine is shipped without oil. See engine manual for instructions on capacity and viscosity recommendations.

Pump: Pump is shipped with oil. Check pump oil level before starting. Remove sticker from pump fill cap.

Water Flow Requirements: Make sure your water tank has sufficient water for your job, or supply water flow rate is 20% higher than the pressure washer's flow rate (see "Operations" section for detail) and that your water is clean and particle free.

Storage: Do not allow water to freeze in the pump, hose, or spray gun(s). See "Storage" for more information.

Maintenance Schedule: Engine and pump require periodic inspection and servicing to keep pressure washer functioning efficiently. See "*Maintenance Schedule Summary*" for frequency of servicing.

Any Questions, Comments, Problems, or Parts Orders
Call NorthStar Product Support 1-800-270-081

Table of Contents

Equipment Protection Quick Facts	1
TABLE OF CONTENTS	2
ABOUT YOUR PRESSURE WASHER	4
SPECIFICATIONS	5
COMPONENT IDENTIFICATION	6
SAFETY	7
Hazard Signal Word Definitions	
SAFETY LABELING	8
Safety Decal Locations	
INITIAL SET-UP	10
Step 1. Inspect & Unpack	10
Step 2. Assembly	
Nozzle, Nozzle Grommet Assembly	
Attach the pressure washer to the vehicle	
Moving and Handling	
Outdoor Use Only	
Install Spark Arrestor (if required)	
OPERATION	13
Follow Safety Rules for Operation	
Preparing for Operation	14
Check/Add Oil to Pump	
Check/Add Engine Oil	
Inspect Fuel System/Check for Leaks	
Connect Hoses, Water Supply, and Spray NozzlePrime the Water Supply	
Start-Up Procedures	
Start the Engine to Power the Pump.	
Begin High Pressure Spray	
Shutdown	19
STORAGE	20
Between Use Storage	20
Prepare Pressure Washer for Freezing Conditions	
Prepare Engine for Long Term Storage	
Prepare Pressure Washer for Storage	
MAINTENANCE & REPAIR	
MAINTENANCE SCHEDULE SUMMARY	22
DETAILED INSTRUCTIONS – MAINTENANCE & REPAIR	22
Follow Safety Rules	22
Keep Pressure Washer Clean	
Inspect Spray System	
Clean Inlet Filter	
Change Fully Oil	

25
26
27
28
29
30

About Your Pressure Washer

Thank you for purchasing a NorthStar Pressure Washer! It is designed for long life, dependability, and top performance.

Intended Use. Produce a high-pressure water spray.

Note: Do not use for other purposes, as unforeseen hazards or equipment damage may result.

Power Source. The pressure washer is powered by a gasoline engine.

Supplies Required. Normal operation will require you to supply:

- Pressure Washer pump oil
- Gasoline
- Engine oil
- Personal Protection Equipment

See "Specifications" section of this manual for more detail.

Site Location. Intended for outdoor use only.

Personal Protection. Wear safety apparel during operation, including safety glasses with side and top protection. Ear protection is also recommended if working near any operating engine. Other safety apparel includes waterproof, insulated gloves and non-slip protective footwear. Cleaning chemicals may require the use of respiration mask; refer to the chemical label for further instruction.

Adult Control only. Only trained adults should set up and operate the pressure washer. Do not let children operate the pressure washer.

Under The Influence. Never operate, or let anyone else operate, the pressure washer while fatigued or under the influence of alcohol, drugs, or medication.

Keep this manual for reference and review.


ATTENTION: Rental Companies and Private Owners who loan this equipment to others!

All persons to whom you rent/loan this pressure washer to must have access to and read this manual. Keep this owner's manual with the pressure washer at all times and advise all persons who will operate the pressure washer to read it. You must also provide personal instruction on how to safely set-up and operate the pressure washer and remain available to answer any questions a renter/borrower might have. Owner's Manuals are available from NorthStar at 1-800-270-0810.

Specifications

990994			
FLO	W OUTPUT		
PSI (bar)	2000 (138)		
GPM (I/min)	3.5 (13.3)		
Max Water Temp	140° F (60°C)		
E	NGINE		
Engine	HONDA GX200		
Displacement	196 cc		
DIMENSION	S/COMPONENTS		
Length	75"		
Width	43"		
Height	44" (Including cap)		
Pump Model	CAT 2SF35GS		
Pump Oil Capacity	10.1 oz		
SUPPLIES REQ	UIRED (not included)		
Engine Fuel	Regular, Unleaded Gasoline		
Engine Oil	Refer to Engine Owner's Manual		
Pump Oil (Shipped with oil but refills required)	SAE 30 Non- Detergent Oil or Cat Pump Oil part # 22158		
Input Water Supply	Tank: Ensure tank has enough water for the cleaning job. Tap: Standard tap water @ 20-75 psi		
Input Water Supply Hose	For Tap: Standard garden hose with inside diameter at least 5/8" (at least 3/4" diameter if hose longer than 100 ft.)		

Component Identification

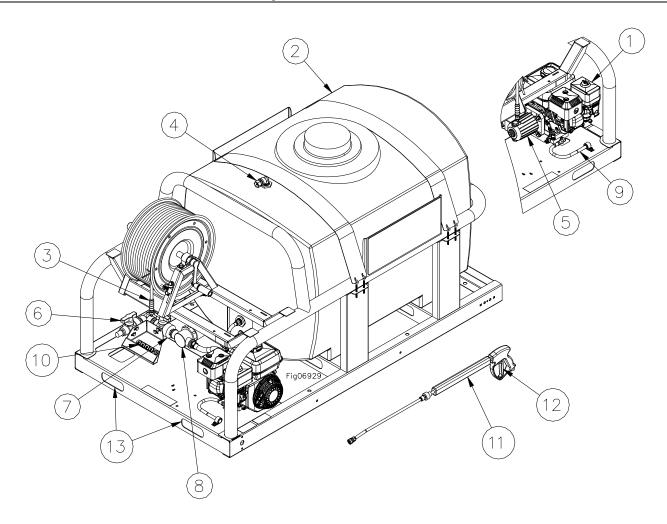

- 1. **Engine:** Honda engine provides years of reliable use. Air cooled engine that powers the pump.
- 2. Feed Tank: Supplies water to the pressure washer.
- 3. Pressure Hose: Attach quick couplers to gun and water outlet.
- 4. Garden Hose Inlet: Connect water supply for water tank
- **5. Pump:** Inspect for loose/broken parts prior to each use. A device that moves fluid through a combination of suction and displacement.
- **6. Ball Valve (Tank Drain):** Allows for remote tank draining (hose not included).
- 7. Ball Valve (Filter): Allows for cleaning in-line strainer while water is in the tank.
- **8. In-line Strainer:** The strainer prevents debris from entering the pump.
- 9. Engine drain oil hose: Allows for easy/clean oil changes.
- **10. Nozzles:** Change nozzles for different spray patterns.
- 11. Spray Gun: Always use two hands for safe operation.
- 12. Trigger: Actuate to allow pressurized water to flow out of spray gun.
- 13. Lifting Points: Lift the pressure washer from these points with forklift.

See "Parts Explosion" for more details

Safety

Hazard Signal Word Definitions





WARNING

CAUTION

CAUTION

NOTICE

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER (red) indicates a hazardous situation, which if not avoided, will result in death or serious injury.

WARNING (orange) indicates a hazardous situation, which if not avoided, could result in death or serious injury.

CAUTION (yellow) used with the safety alert symbol, indicates a hazardous situation, which if not avoided, could result in minor or moderate injury.

CAUTION (yellow) without the safety alert symbol, is used to address practices not related to personal injury.


NOTICE is used to address practices not related to personal injury.

Safety Labeling

Safety Decal Locations

▲ WARNING

ALWAYS make sure safety labels are in place and in good condition. If a safety label is missing or not legible, order new labels from NorthStar Product Support at 1-800-270-0810.

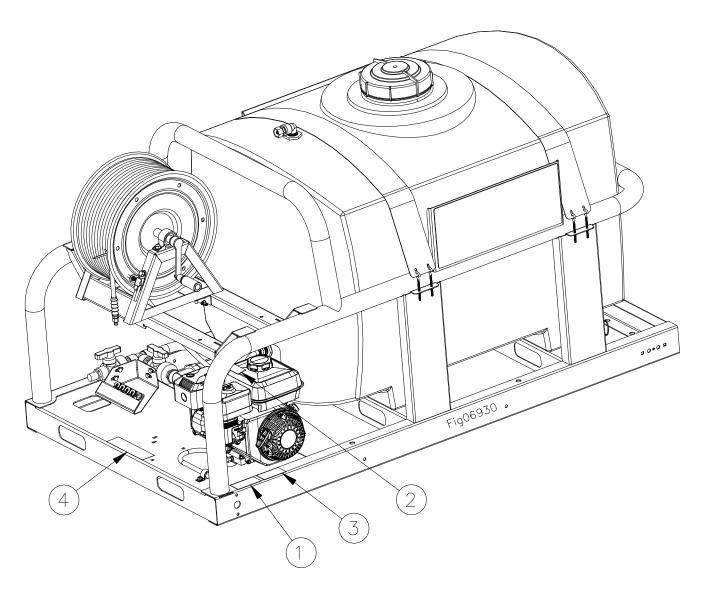

On-Product Warning Labels			
Location	Part Numbers	Description	
1	801118	Poisonous Gas Decal	
2	788936	Burn Hazard Decal	
3	788935	Fuel Fire Explosion Hazard	
4	801049	PW Warning/OP Instructions	

Safety Labeling


Safety Decals



801118

(2)

A WARNING



(3)





Fuel is flammable and explosive.

Never fuel a running or hot engine.



Clean up fuel spills immediately.

Ensure there are no fuel leaks before starting. Keep sources of sparks and flames away. Hot exhaust may also ignite spilled fuel. No Smoking.

Keep a fire extinguisher nearby.



WARNING

- 1.) Skin puncture hazard. Do not direct spray at people or animals. Seek IMMEDIATE surgical treatment.
- 2.) Risk of fire and explosion. Do not spray flammable liquids.
- 3.) Risk of injury. Recoil starter rope can retract rapidly resulting in bodily injury. ALWAYS relieve spray gun pressure before pulling recoil starter rope. Pull starter rope slowly until resistance is felt, then pull rapidly.
- 4.) Risk of electrocution. Keep water away from electric outlets and electric devices.
- 5.) Always wear properly rated safety goggles or face shield while spraying.
- 6.) Gun kicks back. Hold with both hands.
- 7.j Read owner's manual. Serious injury or death can result if safety instructions are not followed.

OPERATING INSTRUCTIONS: START UP SHUT DOWN

- START UP 1. Attach garden hose.
- 2. Attach pressure hose.
- 3. Attach gun and lance.
- 4. Turn water supply ON.
- 5. Squeeze trigger to purge
- air from pump.
- 6. Insert nozzle.
- 7. Start engine.
- 1. Turn engine OFF.
- 2. Turn water supply OFF.
- Squeeze trigger to relieve system pressure.
- 4. Remove garden hose.
- 5. Remove pressure hose.
- Turn fuel valve OFF. (if equipped).

For questions, replacement parts or labels contact product support at www.northerntool.com or call 1-800-270-0810.

801049

To order replacement safety labels, call NorthStar Product Support at 1-800-270-0810.


Initial Set-Up

Step 1. Inspect & Unpack


Upon receiving your item check for missing or damaged parts.

See "Component Identification" section of this manual for a diagram of the pressure washer and its components.

- For missing or damaged components, contact Product Support at 1-800-270-0810.
- If complete, fill out product serial number information. See "Limited Warranty" section of this manual.

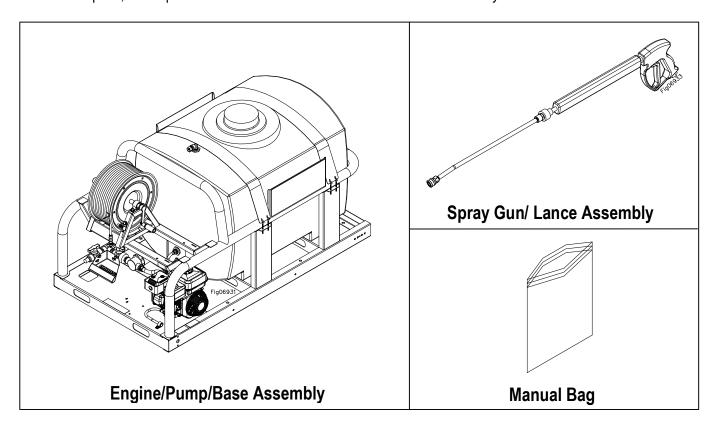

Manual Bag

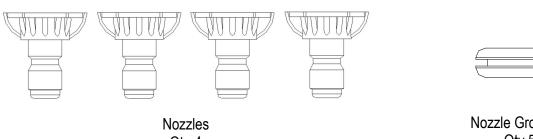

Qty-4
Part # 778740 - 15°, yellow
Part # 778741 - 25°, green
Part # 778742 - 40°, white
Part # 803853 - Soap, black

Nozzle Grommet Qty 5 Part# 777111

Any Questions, Comments, Problems or Parts Orders call NorthStar Product Support at 1-800-270-0810.


Initial Set-Up

Step 2. Assembly

Note: Remove contents from packaging to begin assembly.


Nozzle, Nozzle Grommet Assembly

Insert the Nozzles into the Nozzle Grommet

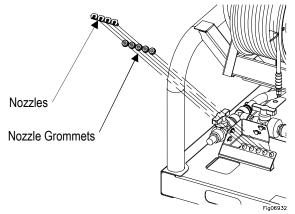

Attach the pressure washer to the vehicle

Secure the pressure washer to the vehicle to prevent the pressure washer from shifting during transport

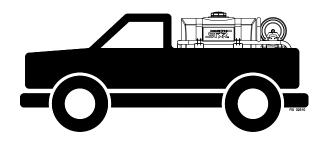

Step 3. Select Suitable Location

Moving and Handling

▲ WARNING

Lifting Hazard

The pressure washer is heavy. It can crush and cause serious injury. Follow the instructions below for safely moving the pressure washer.

Elevating or lowering your pressure washer

 To reduce risk of injury, it is recommended to use forklift to lift the pressure washer. Only lift the pressure washer by inserting forks at designated lifting points. Do not use the pump or engine as a lifting point.

Outdoor Use Only

WARNING

Location Hazards

Choose a suitable site for operating your pressure washer to prevent possible death from carbon monoxide poisoning or injury from fire/explosion, hot surfaces or equipment tip-over.

Select a suitable outdoor location:

- Never run the pressure washer in an enclosed or partially enclosed location such as a building, garage, barn, shed, or house. These spaces can trap poisonous gases. Running a fan or opening windows will not provide adequate ventilation to prevent dangerous CO build-up.
- Only use the pressure washer outdoors at least 20 feet from the home, away from windows, vents, and air intakes, to allow proper ventilation. If you start to feel sick, dizzy, or weak while using the pressure washer, shut off the engine and get to fresh air RIGHT AWAY.
- 3. Position the pressure washer so that the exhaust fumes will not be directed towards people or building air intakes.
- 4. Do not locate and use the pressure washer in the presence of flammable vapors, dust, gases, or other potentially combustible materials.
- 5. Ensure that working, battery-operated or battery back-up carbon monoxide alarms are used in any dwelling/structure that is in close proximity to the running pressure washer.
- This pressure washer is NOT designed or approved for use in vehicles or marine applications. Never run the pressure washer inside RVs or other vehicles, or on boats.

Initial Set-Up

Positioning:

- The pressure washer should be positioned on a firm, level (less than 3-degree slope), heatresistant surface with good drainage.
- Situate so there is adequate pulling room for starting the engine using the recoil starter.
 Attempting to pull at an odd angle could rip off grip cord and/or cause muscular injuries to the operator.

Airflow:

- Situate so there is adequate clearance around pressure washer to allow for airflow – at least 7 feet from any non-combustible wall or obstruction.
- 2. Do not operate with a tarp, blanket, or cover surrounding the pressure washer.
- 3. Do not place any objects against or on top of the pressure washer.
- 4. The pressure washer needs adequate, unobstructed flow of air to allow for proper combustion and adequate cooling. Proper combustion can only be obtained when there is a sufficient supply of oxygen available for the amount of fuel being burned. Cooling ventilation is required to prevent overheating of the pressure washer and possible fire.

Exhaust:

WARNING

Exhaust Modification Hazard

Never attempt to attach ductwork to the muffler system to allow for installation inside an enclosure. This could cause heat build-up and increased exhaust backpressure, resulting in possible exhaust leakage or damage to the pressure washer.

- The exhaust gas from your pressure washer is extremely hot and can cause combustible materials to catch on fire.
- 2. Make sure the engine is at least 7 feet from all combustible materials and structures during operation.
- Keep a fire extinguisher rated "ABC" nearby.
 Keep it properly charged and be familiar with its use.
- 4. Place the pressure washer so that the exhaust fumes will not be directed towards people or building air intakes.

DANGER

Carbon Monoxide Hazard

Exhaust fumes from the engine contain carbon monoxide (CO), a poisonous gas you cannot see, smell, or taste. The CO generated by the engine can rapidly accumulate, even in areas that appear to be well ventilated, resulting in dangerous and fatal concentrations within minutes. NEVER run pressure washer inside any enclosed or semi-enclosed spaces, including homes, garages, basements, sheds, boxes, RVs, or boats. These spaces can trap poisonous gases, EVEN if you run a fan or open windows. If you start to feel sick, dizzy, or weak while using the pressure washer, shut off the engine and get to fresh air RIGHT AWAY. See a doctor. You may have carbon monoxide poisoning.

Install Spark Arrestor (if required)

Equip engine with spark arrestor if pressure washer will be used near any ignitable forest, brush, or grassy land. (See engine Owner's Manual provided to determine if the engine is already equipped.)

Make sure you comply with applicable local, state, and federal codes.

Follow Safety Rules for Operation

After you have checked and fueled the equipment and positioned it in a suitable worksite, it is time to start your pressure washer. The following are the procedures necessary for safe, successful operation of your pressure washer.

♠ WARNING

Failure to follow safety rules may result in serious injury or death to the operator or bystanders.

Instruct Operators. Owner must instruct all operators in safe set-up and operation. Do not allow anyone to operate the pressure washer who has not read the Owner's Manual and been instructed on safe use practices.

Safety Equipment/Controls. Always operate with all safety covers, guards, and barriers in place and in good working order, and all controls properly adjusted for safe operation.

Moving Parts. Keep hands, feet, hair, and apparel away from moving parts. Air vents may cover moving parts and should be avoided as well. Never remove any guards while the pressure washer is operating.

Ear Protection. Hearing can be damaged from prolonged, close-range exposure to the type of noise produced by this pressure washer. The use of ear plugs or other hearing protection devices is recommended for persons working within 15-20 feet of the running pressure washer for an extended period of time.

Eye Protection. Wear ANSI "Z87.1" required safety glasses when operating or servicing the pressure washer. Pressurized spray from this pressure washer can cause severe injury to the eyes. Small objects can become airborne as the spray contacts them.

NOTE!

Before starting the pressure washer, review the following general safety rules for operation:

Conditions for Use

Know How to Stop. Be thoroughly familiar with proper use of the equipment and all controls and connections. Know how to stop the pressure washer and depressurize the system quickly if needed.

Instruct All Operators. The pressure washer's owner must instruct all operators and potential renters in safe set-up and operation. Do not allow anyone to operate

the pressure washer who has not read the Owner's Manual and been instructed on its safe use.

Adult Control only. Only trained adults should set up and operate the pressure washer. Do not let children operate. Pressure washers can generate forces greater than children can control and require judgment beyond what can be expected of children.

Under the Influence. Never operate, or let anyone else operate, the pressure washer while fatigued or under the influence of alcohol, drugs, or medication.

Safety Equipment / Controls in place. Do not operate the pressure washer unless all safety covers, guards, and barriers are in place and in good working order, and all controls are properly adjusted for safe operation.

Damaged. Do not operate the pressure washer with

damaged. Do not operate the pressure washer with damaged, missing, or broken parts. Never attempt to repair a high-pressure hose or component. Always replace it with a part that is rated at or above the pressure rating of the pressure washer.

Modifications. Do not modify the pressure washer in any way or deactivate any safety device. Do not change or add to fuel tank, fuel lines, or exhaust system. Modifications can result in hazards related to carbon monoxide poisoning, fuel leaks, fire, explosion, or other serious safety hazards, and will also void the warranty.

During Use

Stay alert. Watch what you are doing at all times. **Clear work area.** Clear the work area of all bystanders. **Keep children and pets away.**

Keep spray away from electrical wiring. Spray contact with electrical wiring will likely result in severe electrical shock or electrocution.

Do not point gun at people or animal. It may result in serious injury or death.

Hot exhaust/parts. Stay clear of engine exhaust. Never touch a hot engine muffler, or other hot surfaces. All are very hot and will burn you.

Do not direct spray at this pressure washer. Do not attempt to clean this pressure washer with its own spray. Engine damage will result. Cleaning should be done with a damp sponge with the engine OFF.

Let engine cool at least two minutes before refueling.

Avoid inhalation of exhaust. Running this pressure washer indoors can kill you in minutes. Exhaust contains carbon monoxide. This is a poison you cannot see or smell.

Never pull by hose. Do not move this pressure washer by pulling on the hose. Hose or connections could fail and result in catastrophic high-pressure release of fluid as well as hose whipping.

Avoid sharp objects. Keep hose away from sharp objects. Bursting hoses may cause injury.

No load bearing. Do not use the pump to support other items of equipment that impose unacceptable loads on the pump. Do not attempt to use this pressure washer as a prop.

Lock trigger safety latch when not spraying. Spray gun is equipped with a built-in trigger safety latch to guard against accidental trigger release. Rotate safety latch to the locked position when not spraying.

Leaving unattended. Always turn off the pressure washer and relieve system pressure before leaving the pressure washer unattended.

Prompt Emergency Response

Seek medical aid for suspected injection injury. If injured by high-pressure fluid, no matter how small the wound is, see a doctor at once. A typical injection injury may be a small puncture wound that does not look serious. However, severe infection or reaction can result if proper medical treatment is not administered immediately by a doctor who is familiar with injection injuries.

Seek medical aid for suspected carbon monoxide poisoning. The running engine gives off carbon monoxide, a poisonous gas that can kill you. If you start to feel sick, dizzy, or weak while using the pressure washer, shut off the engine and get to fresh air RIGHT AWAY. See a doctor. You may have carbon monoxide poisoning.

Wear Personal Protective Gear

WARNING

Wear personal protective gear to prevent:

- Eye and skin injection injury from high pressure spray
 Eye injury from flying debris
- Wear waterproof gloves, ANSI Z87.1 compliant safety goggles, face protection, and protective clothing when operating the pressure washer. If spraying pressure washer specific chemicals, wear

- a respirator mask to avoid inhalation of vapors if directed on the chemical label.
- Wear non-slip, protective footwear. Use of pressure washer can create puddles and slippery surfaces. Wear footwear capable of maintaining a good grip on wet surfaces.

Preparing for Operation

Make sure that any regular maintenance has been performed as prescribed in "Maintenance & Repair" section.

Pump	Model	Oil Type
CAT	990994	SAE 30 Non- Detergent Oil or
2SF35GS	990994	Cat Pump Oil part # 22158

Check/Add Oil to Pump

CAUTION

Never run the pump without sufficient lubrication!

- 1. Check oil level. Verify that oil level is halfway up the sight glass.
- 2. If oil level is low, use the oil type from above table.
- 3. Replace vented fill cap.

Check/Add Engine Oil

Use the recommended oil type for your engine and expected ambient conditions. (See engine Owner's Manual for oil type and capacity, and more detailed oil check/fill instructions.)

▲ WARNING

Burn Hazard

Never open oil port while engine is running. Hot oil can spray over face and body.

Notes:

- Low oil shutdown feature prevents the engine from starting without sufficient oil.
- Engine is shipped <u>without</u> oil. You must add oil before first use.
- Low water shutdown feature prevents the engine from operating without sufficient water in the tank.

Add Fuel

▲ WARNING

Fuel Fire/Explosion Hazard

Gasoline is highly flammable and explosive. Heat, sparks, and flames can ignite fuel vapors, which can become widespread during fueling. A flash fire and/or explosion could result and cause serious injury or death. Always use extreme care when handling fuels. Carefully follow all instructions to avoid the following conditions which could result in fuel ignition:

- gas vapor collection inside enclosures
- static electric sparks
- sparks from electric wiring, batteries, or running engines
- sources of heat (such as a hot engine exhaust)
- open flames, including pilot lights

Always follow these general safety rules when fueling:

- Turn pressure washer off and allow to cool for at least two minutes before removing any fuel cap. Note: A running or still-hot engine is hot enough to ignite fuel.
- Fill fuel tank OUTDOORS never indoors. Fuel vapors can ignite if they collect inside and enclosure and explosion can result.
- 3) Stay away from all sources of heat, sparks, and flames. Do not smoke.
- 4) Never pump fuel directly into the gas tank at a gas station – it could cause a static electric spark. Follow these steps to avoid static electric sparking during fueling:
 - Use an approved portable container to transfer fuel to the pressure washer's tank. (A portable container made of metal or conductive plastic is preferred because it dissipates charge to ground more readily.)
 - Always place container on the ground to be filled. Never fill the portable gas container while it is sitting inside a vehicle, trailer, trunk, or pickup truck bed.
 - Dissipate static charge from your body before beginning the fueling process by touching a grounded metal object at a safe distance from fuel sources.
 - Keep nozzle in contact with container while filling. Do not use a nozzle lock-open device.
- Clean up fuel spills/splashes immediately.

- If possible, move the pressure washer away from spilled fuel on the ground.
- Wipe up spilled fuel and wait 5 minutes for excess fuel to evaporate before starting engine.
- Fuel soaked rags are flammable and should be disposed of properly.
- If fuel is spilled on your skin or clothes, change clothes and wash skin immediately.

Fill Engine Fuel Tank

Check the gasoline tank level. If needed, fill tank with fresh unleaded gasoline from a portable container:

- 1) Remove engine gas cap.
- 2) Add gasoline through the fill opening:
 - Use only a <u>UL-approved portable gasoline</u> container to transfer the gasoline to engine's tank.
 - Do NOT overfill the gasoline tank. Allow at least 1/2" of empty space below the fill neck to allow for fuel expansion.
- 3) Replace gas cap securely before starting engine.
- Store extra gasoline in a cool, dry place in a ULapproved container.



Inspect Fuel System/Check for Leaks

Inspect the engine fuel system and check for leaks before each use.

Do not start pressure washer until all needed repairs have been completed.

WARNING

Fuel Leak Hazard

Gasoline fuel is highly explosive and fuel leaks can result in fire or explosions. You can be burned and seriously injured if the fuel system is not properly hooked up or there is a fuel leak when you start the engine.

Inspect the entire fuel system. Look for:

- signs of leaks or deterioration
- chafed of spongy fuel hose

▲ WARNING

High Pressure Fluid Injection Hazard

High-pressure fluid discharge from leaks (even pinsized) or ruptured components can pierce skin and inject fluid into the body. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene, and possibly amputation.

- Never use a finger or skin to check for leaks.
- Never operate pressure washer with damaged or missing hoses/parts.
- Never attempt to repair a high-pressure hose or component – Always replace it with a part that is rated at or above the pressure rating of this pressure washer.
- loose connections
- loose or missing fuel hose clamps
- damaged fuel tank or
- · defective gasoline shut-off valve

Inspect Pressure Washer Spray System Always inspect pressure washer spray system for damage and leaks before each use. Do not start pressure washer until all needed repairs have been completed.

Perform Scheduled Maintenance, As needed

Make sure that any other regular maintenance has been performed as prescribed in this manual in the "Maintenance Schedule Summary" section.

Refer to the engine Owner's manual for engine maintenance instructions.

Connect Hoses, Water Supply, and Spray Nozzle

Position Pressure Washer for use

- For detailed instruction on positioning your pressure washer for use, turn to the "Initial Set-Up" section of this manual and reference "Step 3: Select Suitable Location".
- Where no flammable vapors, dusts, and gases are present.
- Where there is adequate, unobstructed ventilation airflow.
- With adequate clearance from combustible materials.
- On a firm, level, heat-resistant surface with good drainage and nearby access to a continuous water supply.

Fill Water Tank or Attach Garden Hose to Water Inlet

- 1.) Make sure the water supply is clean. Debris can cause excess pump wear and reduce performance.
- 2.) An insufficient water supply will damage your pump. Make sure the water supply is steady and is 20% over the rated flow of your pump. Use a stopwatch to time how long it takes to fill a 5-gallon bucket with your garden hose. The bucket must fill faster than the times listed in the table below.

Model#	Time to Fill 5 Gallon Bucket
990994	72 sec


- 3.) The water supply garden hose must have an inside diameter of at least 5/8". If the hose is more than 100 ft. long, the diameter must be at least 3/4".
- 4.) Always use a flexible rubber hose for your water supply. Do not use rigid piping.

Attach High Pressure Hose to Spray Gun and Water Outlet


▲ WARNING High Pressure

NEVER operate this pump with components (such as hose, connections, and spray gun) rated for lower pressure and/or temperature limits than the pressure washer's maximum rated pressure and temperature, or component could rupture and cause serious personal injury from escaping high pressure fluids.

- See "Component Identification" section of this manual for location of the pressure washer's water outlet.
- 2. Your pressure washer hose is equipped with quick couplers. Simply pull the collar back and push the coupler onto the water outlet nipple. The collar should slide over the ball bearings.

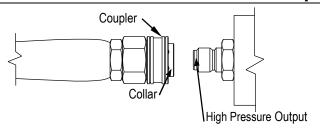

3. Release the collar, making sure it springs back and re-seats to its original (non-retracted) position. Check the connection by pulling on the hose to ensure a positive connection.

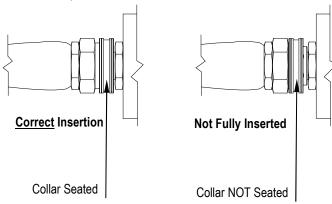


Select Nozzle for Spray Gun

Your pressure washer is equipped with four highpressure nozzles and one low-pressure nozzle. Generally, the wider the spray angle of the nozzle, the lower the spray impact produced. Select the appropriate nozzle for the job based on the following table:

Color of Nozzle:	Spray Angle	Used For
Yellow	15	Tough Stains/Stripping
Green	25	General
White	40	Light Cleaning
Black (Low Pressure)	65	Low pressure rinsing

Attach Nozzle to Spray Gun

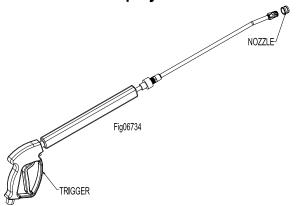


WARNING


Depressurize First

Any time you remove/install/change a nozzle, you must depressurize hose line by squeezing the spray gun trigger while the engine is off. Even if the engine has been off for a long period of time, the hose may remain dangerously pressurized.

- 1. Make sure the engine is off and the hose line is depressurized.
- 2. To install the nozzle, pull the collar back and twist the nozzle firmly into the coupler on the end of the wand.
- 3. Release the collar, making sure it springs back and



re-seats to its original (non-retracted) position. Check the connection by pulling on the nozzle to ensure a tight connection -- if correctly inserted, nozzle will rotate but not pull out.



Prime the Water Supply Turn On Water Supply and Squeeze the Trigger

CAUTION: Water Pressure

Never run the pump without ball valves open for tank supplied water. Operating the pressure washer without a sufficient water in the tank will damage the pump.

- Turn on the water supply. Make sure the water supply is steady and flowing at a rate 20% over the rated flow of your pump. (Reference the flow rate table under the Connect Hoses, Water Supply, and Nozzle" section.)
- Purge air from the water supply hose by squeezing the trigger until a steady stream of water flows out of the nozzle at low pressure. (Air in the hoses can cause damage to the pump, so always make sure all the air is out of the hoses before starting the engine

CAUTION: Water Pressure

Never operate the pressure washer with the tank drain ball valve open. Operating the pressure washer with the drain ball valve open will cause poor pump inlet conditions and will damage the pump.

Make sure the water supply hose is not kinked. A
kinked hose will provide insufficient water supply to
the pump and reduce its life. Make sure the hose
remains unkinked after moving the pressure washer.

Start-Up Procedures

Start the Engine to Power the Pump

1. Make sure water supply is connected and primed.

CAUTION

Warranty Void

Running the pump dry will cause damage and void the warranty.

- To prevent accidental spraying, engage the safety latch on spray gun trigger by rotating it to the locked position.
- 3. Follow the instructions in the Engine Owner's Manual for starting the engine.
 - If the engine doesn't start on the first try, pressure may build up in the pump. Relieve pressure by squeezing the spray gun trigger before attempting to start engine again. This will make starting easier.

A DANGER

Engine Exhaust

Do not inhale engine exhaust. It contains dangerous carbon monoxide that can kill you.

Begin High Pressure Spray

▲ WARNING


High - Pressure Spraying Safety

- Keep spray away from people. Never direct discharge stream at or near any person. Do not allow any part of the body to come in contact with the fluid stream. High-pressure spray can cause serious skin, eye, or falling injuries. Injection injury will occur if high-pressure spray pierces the skin, injecting liquid under the skin. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene and possibly amputation. Seek medical attention.
- Do not secure trigger open. To reduce risk of injury, do not attempt to secure the spray gun open by blocking or tying the spray gun in the open position.
- Prevent slips / loss of balance. High-pressure spray could cause you to lose balance from kickback forces, and wet surfaces can be slippery.
 - Keep good footing and balance at all times. Do not overreach.
 - Do not stand on unstable support when spraying.
 - If spraying from an elevated surface, use fall protection because spray gun kickback can propel you off the elevated surface. When spraying from a ladder or scaffolding, ensure it is firmly anchored from sway or tip-over.
 - Be aware of puddles and slippery surfaces.
 Ensure there is adequate drainage to prevent pooling of water.
- Prevent surface damage & flying debris.

 Surfaces being sprayed must be strong enough to withstand high-pressure spray or damage may result. In addition, high-pressure spray will dislodge unsecured objects as well as surface chips and debris, resulting in hazardous flying objects that can cause personal injury or property damage. Do not spray brittle surfaces or breakable, fragile, or unsecured objects such as:
 - o stucco or laminar flagstone
 - o some painted surfaces
 - windows or glass doors, or mailboxes they may break)
 - o light fixtures, flowerbeds, mailboxes
 - o unsecured, lightweight objects

Procedure:

- Insert one of the high-pressure spray nozzles (always relieve system pressure first and follow instructions for attaching a nozzle).
- 2. Clear the cleaning area of all persons. Keep children and pets away.
- Hold the spray gun firmly with two hands and a sturdy stance -- Gun kicks back when triggered.
- 4. Wash from the bottom to the top, using side-toside motions. This washes away heavy dirt as you work toward the top.
- 5. Use the width of the spray pattern to wash a wide path. Overlap spray paths for complete coverage.
- 6. The nozzle should be 12" to 24" from the work, closer for tough areas.
- Small parts should be washed in a basket so the pressure does not push them away. Larger, lightweight parts should be clamped down.
- The pressure washer is set and locked to the maximum rated pressure when it leaves the factory. To reduce the pressure, turn the unloader knob counterclockwise. To return to maximum pressure turn knob clockwise.

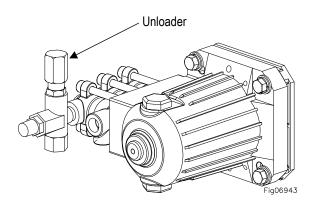

WARNING


Warranty Void

Do not attempt to alter the unloader valve's maximum pressure. Excess pressure could cause serious injury from escaping high-pressure fluids and/or pump damage. Any alteration other than turning the adjustment knob will void your warranty.

 If temporarily interrupting spraying, rotate trigger safety latch downward to the locked position to guard against accidental trigger release

Spray Gun Safety Lock

When not spraying, use the spray gun safety lock to prevent accidental high-pressure discharge.



- 10. Always turn off the engine and activate spray gun trigger to relieve system pressure when:
 - the pressure washer is unattended, or
 - disconnecting hoses, installing/cleaning nozzles, or servicing the pump.

MARNING Injury

Always turn off the engine and relieve system pressure when finished spraying or when leaving pressure washer unattended. Serious injury could result from unintentional release of high-pressure spray.

Shutdown

▲ WARNING

Injury

Never disconnect the high-pressure hose from the pump or spray gun while the system is pressurized. Relieve pressure by squeezing the spray gun trigger after the engine is turned OFF.

Stop the engine using the following steps:

- Turn engine OFF.
- 2. Turn water supply OFF.
- 3. Squeeze trigger to relieve system pressure.
- 4. Remove garden hose.
- 5. Remove pressure hose.
- 6. Remove nozzle from spray gun.
- 7. Turn gasoline line valve to the OFF position.
- 8. Cool engine at least five minutes before storing; a hot engine is a fire hazard.

Storage

When you are finished using the pressure washer, you must prepare the pressure washer for storage and store it in a proper location.

Between Use Storage

Perform periodic maintenance as directed in this manual to keep the pressure washer in safe working condition.

Choose a storage location that is:

- Clean and dry.
- Away from sources of heat, open flames, sparks, or pilot lights, even if the pressure washer's engine fuel tank is empty. Residual fuel fumes from tank can ignite.

Away from extreme high or low temperatures. Do not store the pressure washer in freezing conditions unless it is prepared as directed below for those conditions. *Note:*

- If you will be storing the pressure washer in freezing conditions, follow the instructions for preparing the pressure washer for storage in freezing conditions.
- If you will not be using the pressure washer again for 30 days or more, follow the instructions for preparing the engine for long-term storage.

▲ WARNING

Flammable Materials

- Fuel and its vapors can ignite and cause a fire. Select a well-ventilated storage area away from sources of heat, flame, or sparks.
- A hot engine can ignite flammable materials. Always let engine cool at least five minutes before storing.


Prepare Pressure Washer for Freezing Conditions
If you will be storing the pressure washer in freezing
temperatures, you must properly prepare the
pressure washer to prevent water from freezing in
the system.

▲ WARNING

Freezing Conditions

Do not allow water to freeze in the pressure washer, high pressure hose, or spray gun. Freezing water can cause damage to the equipment and cause the spray gun to fail in the open position. A spray gun that has failed in the open position can whip around and cause personal injury when the pressure washer is started.

- The use of RV antifreeze will save the components from freeze damage and keep them lubricated.
- Disable the low-water shut-down by disconnecting the white float switch wire from the yellow engine wire

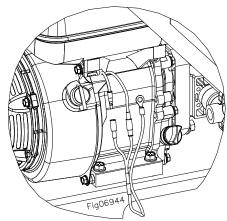

- Fill attached feed tank with at least 5 gallons of RV antifreeze.
- Run the engine until RV antifreeze comes out of the high pressure water outlet.
- Make sure excess antifreeze is disposed of safely.
- Reconnect low water shut down.

Storage

Prepare Engine for Long Term Storage

First prepare the engine for long term storage if you will not be using the pressure washer for more than 30 days.

Fuel can become stale when stored over 30 days. Stale fuel causes acid and gum deposits to form in the fuel system which can cause malfunction of the engine.

- 1. Prepare fuel system for storage:
 - Drain all gasoline from the tank and carburetor. This is most easily accomplished by running the pressure washer with the highpressure hose until the engine stops from lack of fuel. Drain carburetor bowl after engine has stopped and has been allowed to cool for at least two minutes.

OR

 Add fuel stabilizer to the gasoline (following manufacturer's instructions)

Fuel stabilizer steps:

- a. Ensure gas tank is full.
- b. Add fuel stabilizer to fuel tank.
- c. Run pressure washer with high pressure hose at least 5 minutes after adding stabilizer to allow it to enter the fuel system.

- d. Shut off engine.
- 2. Lubricate cylinder and piston:
 - a. Disconnect spark plug wire and remove spark plug.
 - b. Add one teaspoon oil through spark plug hole.
 - Place rag over spark plug hole and slowly pull the recoil a few times to lubricate the combustion chamber.

Replace spark plug, but do not reconnect the spark plug wire.

Prepare Pressure Washer for Storage

- 1. Make sure the engine start switch is OFF.
- 2. Disconnect the engine spark plug wire if you haven't already done so.
- 3. Disconnect the high-pressure hose, garden hose, and spray gun.

Move Pressure Washer to Storage Location Let engine cool for 5 minutes before moving the pressure washer to its storage location.

Maintenance & Repair

WARNING

Maintenance Hazards

ALWAYS shut off water supply, bleed water pressure, turn off engine, and disconnect the spark plug wire before cleaning, adjusting, or servicing the pressure washer. After servicing, make sure all guards and cover shields are replaced before using.

Maintenance Schedule Summary

Item	Frequency
Remove dust/debris accumulation	As needed
Inspect fuel system	Each use
Inspect pressure washer spray system	Each use
Clean inlet filter	Each use
Check engine oil level	Each use
Check pump oil level	Each use
Perform engine maintenance	As specified in engine Owner's manual
Change pump oil	After first 50 hours of use
	 Every 3 months or 500 hours of use after that

See detailed instructions for each maintenance item below.

(Note: For end-of-the-season storage instructions, see the "Storage" section of this manual.)

Detailed Instructions – Maintenance & Repair

No modifications. Never modify or alter the pressure washer in any way. Modifications can create serious safety hazards and will also void the warranty.

Follow Safety Rules

Read and follow these safety rules whenever you will be servicing the pressure washer:

- Turn off / relieve pressure first. Always turn off pressure washer and relieve system pressure before inspection or maintenance. Remove spark plug or spark plug wire to prevent accidental starting.
- Fuel valve off. Turn fuel shut-off valve to OFF position before transporting or servicing the pressure washer
- Replace guards. Make sure all guards and cover shields are replaced after servicing the pressure washer.
- Major repair. Major service, including the installation or replacement of parts, should be performed only by a qualified service technician. Obtain factory approved parts from NorthStar Product Support at 1-800-270-0810.

Replacement parts. If a part needs replacement, only
use factory approved repair parts. Replacement parts
that do not meet specifications may result in a safety
hazard or poor operation of the pressure washer and
will void the warranty.

Keep Pressure Washer Clean

If dust or debris accumulates on the pressure washer, clean the pressure washer with a damp cloth or soft bristle brush. Do not allow air intakes to become blocked.

CAUTION

Do not spray pressure washer with a garden hose or pressure washer. Water may enter the pressure washer and cause damage.

Inspect Spray System

Inspect spray system for damage and leaks before each use.

Do not start pressure washer until all needed repairs have been completed.


Maintenance & Repair

WARNING

High Pressure Fluid Injection Hazard

High pressure fluid discharge from leaks (even pin-sized) or ruptured components can pierce skin and inject fluid into the body. Injection injury can result in blood poisoning and/or severe tissue damage leading to infection, gangrene, and possibly amputation.

- Never use a finger or skin to check for leaks.
- Never operate pressure washer with damaged or missing hoses/parts.
- Never attempt to repair a high-pressure hose or component – Always replace it with a part that is rated at or above the pressure rating of this pressure washer.
- Check hoses, fittings, wand, trigger gun and connections for signs of wear, cracks, looseness, or leaks. Replace as required.
- 2) Check and clean the nozzle orifice.

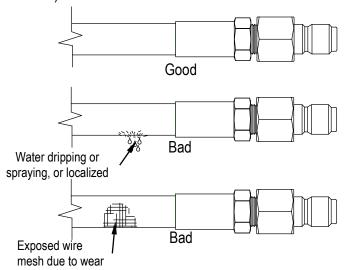

Clean Inlet Filter Clean the inlet filter before each use.


WARNING

Filter Disposal

When cleaning filters, check whether dangerous chemicals have been used with the filter and take any precautions that may be recommended by the manufacturer of these chemicals. Always dispose of hazardous fluids per local, state, and national guidelines.

- Close Ball Valve (Filter) to prevent water from tank from flowing out line strainer during cleaning.
- 2) Unscrew in-line strainer cover.

- 3) Remove filter screen.
- 4) Run water through filter screen to clean.
- 5) Reassemble.
- Open Ball Valve (Filter).

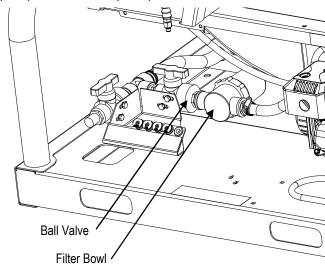

Inspect Fuel System

Inspect the engine fuel system and check for leaks before each use.

Do not start pressure washer until all needed repairs have been completed.

▲ WARNING

Filter Disposal

Gasoline fuel is highly explosive and fuel leaks can result in fire or explosions. You can be burned and seriously injured if the fuel system is not properly hooked up or there is a fuel leak when you start the engine.

Inspect the entire fuel system. Look for:

- signs of leaks or deterioration
- chafed or spongy fuel hose
- loose connections
- loose or missing fuel hose clamps
- damaged fuel tank
- defective gasoline shut-off valve

Maintenance & Repair

Perform Engine Maintenance

-As specified in the Engine Owner's manual.


Engine maintenance items include:

- 1. Changing oil and oil filter
- 2. Air filter check/replacement
- 3. Spark plug cleaning and replacement
- 4. Fuel filter check/replacement
- 5. Inspecting and cleaning muffler (and spark arrestor if equipped)

Change Pump Oil

Change the pump oil after the first 50 hours of use, and then after every 3 months or 500 hours of use after that.

- 1. Remove drain plug from pump.
- 2. Drain pump oil into suitable container and dispose of responsibly.
- 3. Reinstall oil drain plug.
- 4. Make sure pressure washer is sitting level.
- Reference the "Specifications" section of this manual to determine the oil type and quantity needed for your pump model.
- 6. Replace oil fill cap.

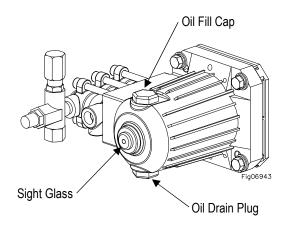

NOTICE:

Dispose of used motor and pump oil in a manner that is compatible with the environment and in accordance with local, state, and federal laws and regulations.

- Take used oil in a sealed container to your local recycling center or service station for reclamation.
- Do not throw it in the trash, pour it on the ground, or pour it down a drain.

NOTE TO COMMERCIAL USERS:

All mechanical equipment, no matter how well designed, will need maintenance and repairs. A NorthStar pressure washer is no exception. At times, a NorthStar pressure washer may become inoperable because repairs are required. NorthStar Product Support will assist in these repairs as needed, but if an inoperable pressure washer creates a major expense to your business, then we strongly recommend the following:

- Have a staff person become familiar with the mechanical operation of the pressure washer and capable of making minor repairs and performing all preventative maintenance procedures.
- Keep a stock of recommended service parts for maintenance and minor repairs.

IMPORTANT: Replacement Parts

If a part needs replacement, only use parts that meet the manufacturer's part number specifications. Replacement parts that do not meet specifications may result in a safety hazard or poor operation of the pressure washer.


Contact NorthStar Product Support at 1-800-270-0810 for any questions, problems, or parts orders.

Troubleshooting

This section provides a list of the more frequently encountered pressure washer malfunctions, their causes, and corrective actions. Some corrective actions can be performed by the operator or maintenance personnel, and others may require assistance of a qualified Service Center.

ENGINE WILL NOT START		
Causes	Solutions	
Low oil shutdown	Fill engine with the adequate amount of oil	
Low water shutdown	Fill water tank with adequate water.	
Cold engine	Choke engine to start	
No fuel	Add gas to fuel tank. Make sure fuel shutoff valve is open	
Pressure build-up from initial use	Trigger spray gun to relieve pressure	
Engine not turned ON	Place ON/OFF switch in the ON position	
Spark plug wire not attached	Attach spark plug wire to spark plug	
L(OW/SURGING PRESSURE	
Causes	Solutions	
Insufficient water supply	Increase water flow, check for kinked or pinched hose	
Plugged line filter	Pull out and clean screen carefully	
Need to use high pressure nozzle	Change to the green, yellow, white, or red nozzle	
Plugged nozzle	Remove nozzle, check for blockage	
Worn nozzle	Replace nozzle	
Leak in high pressure line	Fix leaks	

Parts Explosion- Model #990994 Rev. D

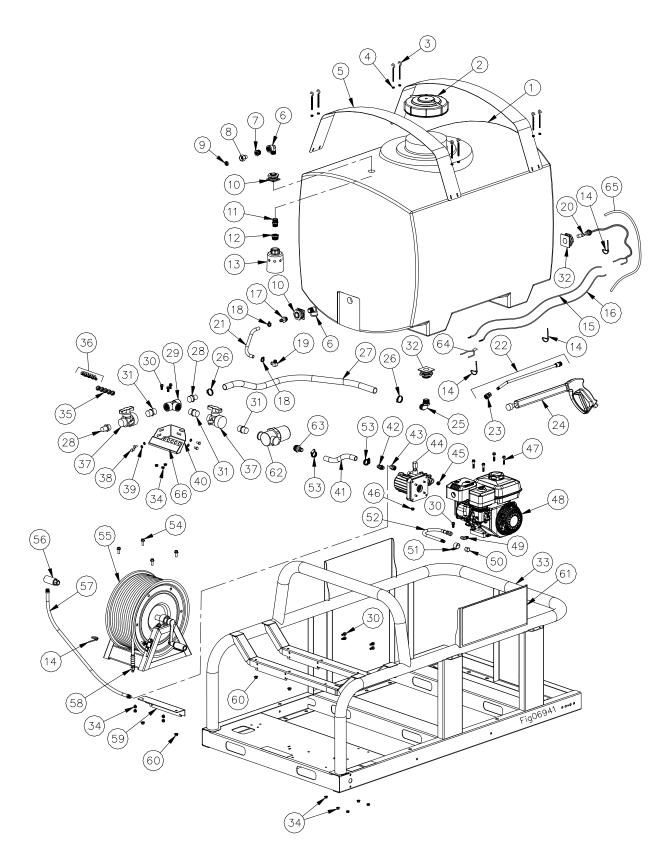


Parts List - Model #990994 Rev. D

REF#	PART#	DESCRIPTION	QTY
1	30198	Tank, 200 Gallon PCO	1
2	SNY34700088	200 Gallon Tank Lid	1
3	82080	1/4-20 Open Eye Bolt	8
4	82222	1/4-20 Nyloc Nut	8
5	779093	Tank Strap - CS	2
6	802138	Fitting, 3/4" Street Elbow	2
7	792431	Fitting, 3/4" NPT X 3/8" FNPT Reducer	1
8 & 9	800783	Garden Hose Adapter & Washer Filter	1
10	5370	Bulkhead Fitting	2
11	779270	Fitting, 3/4" Hex Nipple	1
12	802139	Fitting, 1" NPT X 3/4" FNPT Reducer	1
13	794031	Inlet Float Valve	1
14	82155	Tie, Cable Black,50# 11	4
15	802192	Harness, Wire, Float Switch To Engine	1
16	802193	Harness, Wire, Float Switch To GND	1
17	779268	3/4MPT X 1/2HB Polypro -CS	1
18	777119	Clamp, 1/2" Hose (GN, PW&CS)	2
19	32808	3/8" NPT X 1/2" HB Elbow	1
20	802191	Float Switch	1
21	2264	Hose,1/2 Low Press Sprayer FT	1.58'
22	803709	Lance,18.5" W/EPDM Coupler-PW	1
23	791308	Nozzle Quick Coupler	1
24	779165	Gun With Lance-PW	1
25	5281	Fitting, 1" Male X 1" Hose Barb Elbow	1
26	17147	1" Hose Clamp	2
27	30917	1" PVC Hose	48"
28	779496	Fitting, 1" Male X 1" Hose Barb	2
29	802132	Fitting 1" NPT Tee	1
30	82621	5/16-18 X 3/4 Flange Bolt	8
31	779086	Fitting, 1" Hex Nipple	3
32	5361	Bulkhead Fitting, 1" NPT	2
33	802140	200 Frame	1
34	82630	5/16-18 Nyloc Flange Nut	12
35	777111	Grommet	5

REF#	PART#	DESCRIPTION	QTY
	803853	QC Soap Nozzle, Black-PW	1
36	778740	Q.C. 15 Degree X 05-PW	1
36	778741	Q.C. 25 Degree X 05-PW	1
	778742	Q.C. 40 Degree X 05-PW	1
37	780441	Ball Valve	2
38	82044	Screw, M8-1.25 X 16 HHCS GR8.8Z	4
39	82100	Washer, Split Lock Z 5/16	4
40	802118	Ball Valve Mount/Nozzle Bracket	1
41	791252	3/4" PVC Hose	.75'
42	786892	Fitting 3/8" MNPT X 3/4" HB	1
43	786891	Coupler, 3/8 FNPT Forged	1
44	802133	Pump-2SF35GS CAT-PW	1
45	777837	Plug, Hex Head 3/8-PW	1
46	777838	Plug, Hex 1/4"C. Sunk-PW	1
47	82622	5/16-18 X 1-1/2 HHFB	4
48	606512	Engine-6.5HP Honda GX200UT2QX2	1
49	801445	Fitting, 9/16-18 Male JIC X 10MM Elbow	1
50	801097	Fitting, 3/8 FPT Cap	1
51	779666	Clamp, 1" Loop	1
52	801089	Hose, Oil Drain	1
53	17141	3/4" Hose Clamp	2
54	82624	3/8-16 X 1" Bolt	4
55	793814	Hose Reel	1
56	796519	Super Swivel	1
57	37549	Hose, 3/8 X 36	1
58	777779	Hose,150' 3/8"6000PSI Gray-PW	1
59	802119	Hose Reel Bracket	1
60	82631	3/8-16 Nyloc Flange	4
61	789000	NorthStar Decal	2
62	779008	Strainer	1
63	802144	Fitting, 1" MALE NPT X 3/4" Hose Barb	1
64	787510	Wire, Low Water "Y"	1
65	777135	Split Loom	84"
66	802159	Decal, Nozzle	1

Pump Exploded View – Cat 2SF35GS

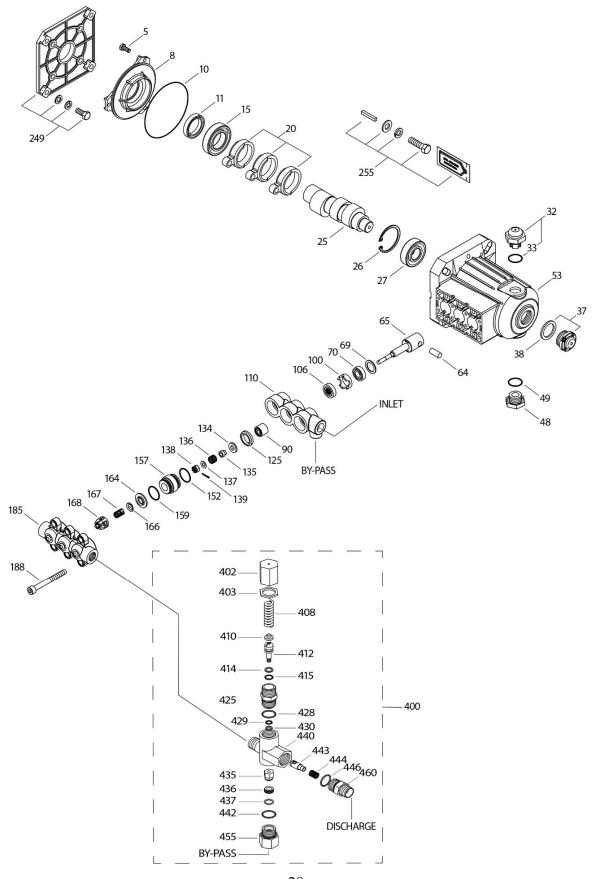

Pump Exploded View Continued – Cat 2SF35GS

	T	T	1
REF#	PART#	PART# DESCRIPTION	
5	CA549360	Screw, HH (M6x 14)	3
8	CA547153	Cover, Bearing, Inner	1
10	CA14041	O-Ring, Bearing Cover - 70D	1
11	CA55337	Seal, Oil (See Tech Bulletin 092)	1
15	CA14488	Bearing, Ball, Inner	1
20	CA547046	Rod, Connecting	3
25	CA46017	Crankshaft, 3450 RPM, 3/4", 5.6mm	1
26	CA12385	Ring, Retaining	1
27	CA15710	Bearing, Ball, Outer	1
32	CA547961	Cap, Oil Filler w/O-Ring	1
33	CA14179	O-Ring, Oil Filler Cap - 70D	1
37	CA92241	Gauge, Bubble Oil w/Gasket - 80D	1
38	CA44428	Gasket, Flat Flex., Oil Gauge - 80D	1
48	CA44842	Plug, Drain [1/2" NPT(F)]	1
49	CA14179	O-Ring, Drain Plug - 70D	1
53	CA547285	Crankcase	1
64	CA16948	Pin, Crosshead	3
65	CA44865	Rod, Plunger	3
69	CA126259	Washer (M24)	3
70	CA25461	Seal, Oil	3
90	CA45847	Plunger (M18x14)	3
100	CA44869	Retainer, Seal	3
106	CA834378	Seal, LPS w/S-Spg	3
110	CA44874	Manifold, Inlet	1
125	CA43245	Seal, HPS w/S	3
134	CA45854	Valve, Inlet	3
135	CA549520	Spacer, Inlet	3
136	CA44872	Spring, Inlet Valve	3
137	CA88575	Washer, Conical (M6)	3
138	CA27000	Nut, Slotted (M6)	3
139	CA14158	Cotterpin (M1.6x10)	3
152	CA26089	O-Ring, Adapter, Inner - 80D	3
157	CA44878	Discharge Valve Adapter	3
159	CA26089	O-Ring, Adapter, Outer - 80D	3
164	CA44881	Seat	3

REF#	PART#	DESCRIPTION		
166	CA43723	Valve	3	
167	CA541062	Spring		
168	CA44565	Retainer, Spring	3	
185	CA44879	Manifold, Discharge	1	
188	CA126762	Screw, HSH (M8x75)	6	
249	CA30520	Assy, Adapter Mount, Gas	1	
255	CA30517	Assy, Bolt Mount	1	
285	CA80228	Screw (M8-1.25x80) (Not Shown)	2	
300	CA34053	Kit, Seal (Inclds: 106,125,139,152, 159)	1	
310	CA34052	Kit, Discharge Valve (Inclds: 152,159,164,166,167,168)	1	
311	CA34668	Kit, Inlet Valve (Inclds: 134-139,152,159)	1	
400	CA7500S	Unloader, Regulating	1	
402	CA540081	Cap, Hex Adjusting	1	
403	CA45070	Nut, Lock	1	
408	CA32094	Spring, Pressure	1	
410	CA107672	Retainer, Spring	1	
412	CA45694	Stem, Piston (M5)	1	
414	N/A SEE *	Back-up-Ring, Piston Stem	1	
415	N/A SEE *	O-Ring, Piston Stem - 70D	1	
425	CA107673	Retainer, Piston	1	
428	N/A SEE *	O-Ring, Piston Retainer - 70D	1	
429	N/A SEE *	O-Ring, Body	1	
430	N/A SEE *	Back-up-Ring, Body	1	
435	CA45696	Valve and Ball Assembly (M5)	1	
436	CA107680	Seat	1	
437	N/A SEE *	O-Ring, Seat - 70D	1	
440	N/A	Body	1	
442	N/A SEE *	O-Ring, By-Pass Fitting - 70D	1	
443	CA541060	Valve, Check w/NBR O-Ring		
444	CA45924	Spring, Check valve		
446	N/A SEE *	O-Ring, Discharge Fitting - 70D		
455	CA45695	Fitting, By-Pass [3/8" NPT(F)]	1	
460	CA107681	Fitting, Discharge [3/8" NPT(M)]	1	
*	CA32097	Kit, O-Ring (Inclds: 414, 415, 428, 429, 430, 437, 442, 446)		

Limited Warranty

Dear Valued Customer:

The NorthStar Product you just purchased is built with the finest material and craftsmanship. Use this product properly and enjoy the benefits from its high performance. By purchasing a NorthStar product, you show a desire for quality and durability. Like all mechanical equipment this pressure washer requires a due amount of care. Treat this pressure washer like the high-quality piece of machinery it is. Neglect and improper handling may impair its performance. Please thoroughly read the instructions and understand the operation before using your product. Always contact NorthStar Product Support at 1-800-270-0810 prior to having any service or warranty work performed, as some services performed by parties other than NorthStar approved service centers may void this warranty. This warranty is in lieu of any other warranty expressed or implied and NorthStar assumes no other responsibility or liability outside that expressed within this warranty.

Limited Warranty

NorthStar shall warranty any piece of equipment manufactured, or parts of equipment manufactured, to be free from defects in material or workmanship for a period of:

Item Number	Item Name	Commercial/Consumer Warranty	Details
990994	NorthStar	10 years from date of purchase	NorthStar shall warrant structural components from failure for a period of 10 years from the date of purchase by user. Structural parts include but are not limited to, cart, handle, billboard and bumper tube
802133	Pump	5 years from date of purchase, Lifetime on pump manifold	NorthStar shall warrant the pressure washer pump to be free of defects in material and workmanship for a period of 5 years. NorthStar makes no warranty on standard wear items such as, but not limited to, seals, valves, seats, O-rings and pistons.
606512	GX Engine	3 years from date of purchase	The engine warranty is covered under the terms and conditions as outlined by the engine manufactures warranty and is the sole responsibility of the engine manufacture. Normal engine maintenance such as spark plugs, air filters, adjustments, fuel system cleaning and obstruction due to build up is not covered by this NorthStar warranty.
990994	Normal Wear Items	90 days from date of purchase	In addition to the normal warranty, NorthStar shall warrant any normal wear item from defects in material or workmanship for a period of 90 days from the date of purchase by user. Normal wear items include, but are not limited to, nozzles, quick connect fittings, valves, high- pressure hoses, O-rings, filter elements, Gun, Lance, Tires, and unloader valves

[&]quot;Consumer use" means personal residential household use by a consumer. "Commercial use" means all other uses, including use for commercial, income producing or rental purposes or when purchased by a business.

This warranty applies to the original purchaser of the equipment (verification of purchase, in the form of a receipt, is the responsibility of the buyer), is non-transferable, and covers parts and labor. Parts will be replaced or repaired at no charge, except when the equipment has failed due to lack of proper maintenance. If a part is no longer available, the part may be replaced with a similar part of equal function. Any misuse, abuse, alteration or improper installation or operations will void warranty. Determining whether a part is to be replaced or repaired is the sole decision of NorthStar. NorthStar will not provide for replacement of complete products due to defective parts. Any costs incurred due to replacement or repair of items outside of a NorthStar approved facility is the responsibility of the buyer and not covered under warranty. Transportation costs to and from service center is the responsibility of the customer.

This warranty specifically excludes the following; failure of parts due to damage caused by accident, fire, flood, windstorm, acts of God, applications not approved by NorthStar in writing, corrosion caused by chemicals, use of replacement parts which do not conform to manufacturer's specifications, damage related to rodent and/or insect infestation and damage caused by vandalism. Additional exclusions: loss of running time, inconvenience, loss of income, or loss of use, including any implied warranty of merchantability of fitness for a specific use. Also, Outdoor Power Equipment needs periodic parts and service to perform well, and this warranty does not cover instances when normal use has exhausted the life of a component or the engine.

This warranty does not cover any personal injury or damage to surrounding property caused by failure of any part. Repair or replacement of parts does not extend the warranty period.

Limited Warranty Continued

The engine warranty is covered under the terms and conditions as outlined by the engine manufactures warranty contained herein and is the sole responsibility of the engine manufacture. Normal engine maintenance such as spark plugs, air filters, adjustments, fuel system cleaning and obstruction due to build up is not covered by this NorthStar warranty.

Please fill in the following information and have it on hand when you call in on a warranty claim.
Customer Number:
Date of Purchase:
NorthStar Serial Number:
Item Number:

▲ WARNING: This product can expose you to chemicals including gasoline engine exhaust, which is known to the State of California to cause cancer, and carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov.



Assembled by
Northern Tool & Equipment Company, Inc.
Burnsville, MN 55306
NorthernTool.com